


YOKOGAWA

控制手冊


UT150.152.155 專用

UT 150.152.155 控制手冊

- (一) 一般操作:利用▲或▼鍵設定所需要溫度按 SET 鍵即可
 (二) 內部設定值：

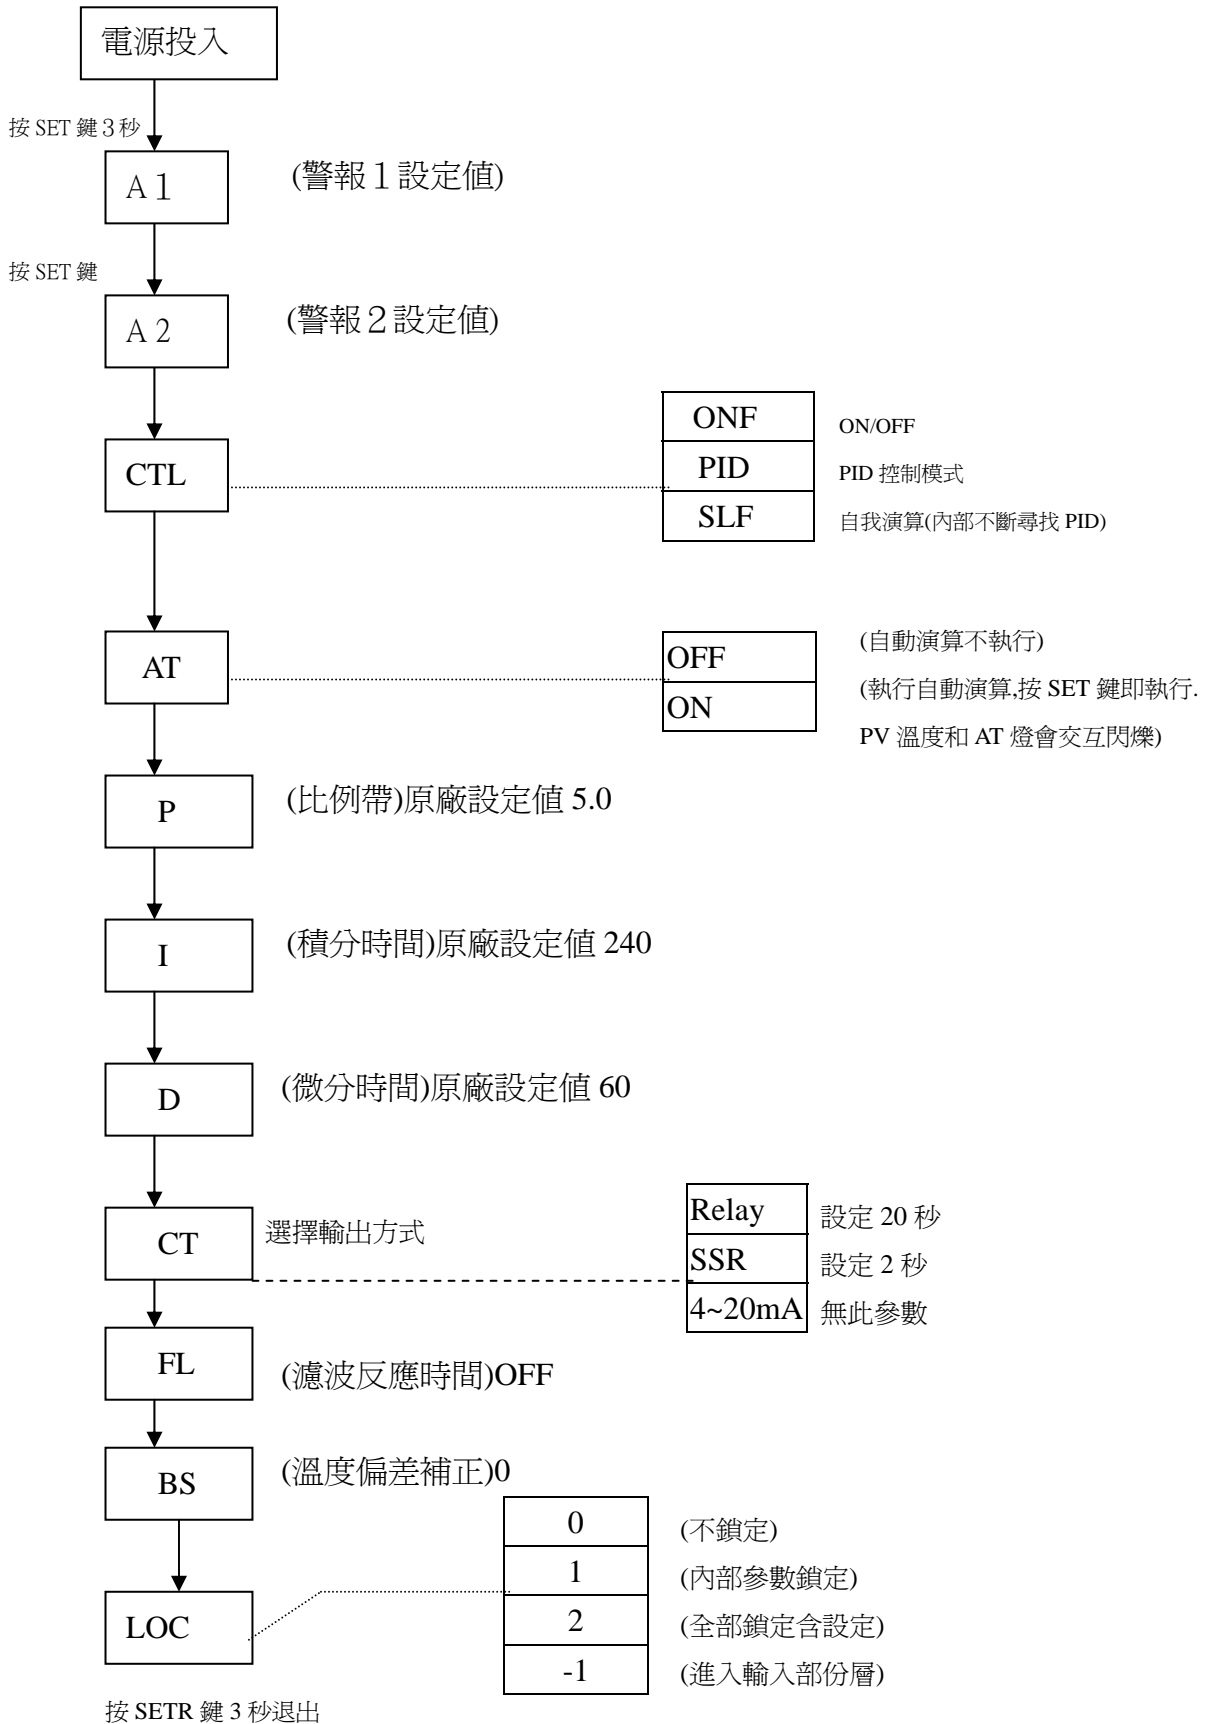

(三)進入輸入部分:

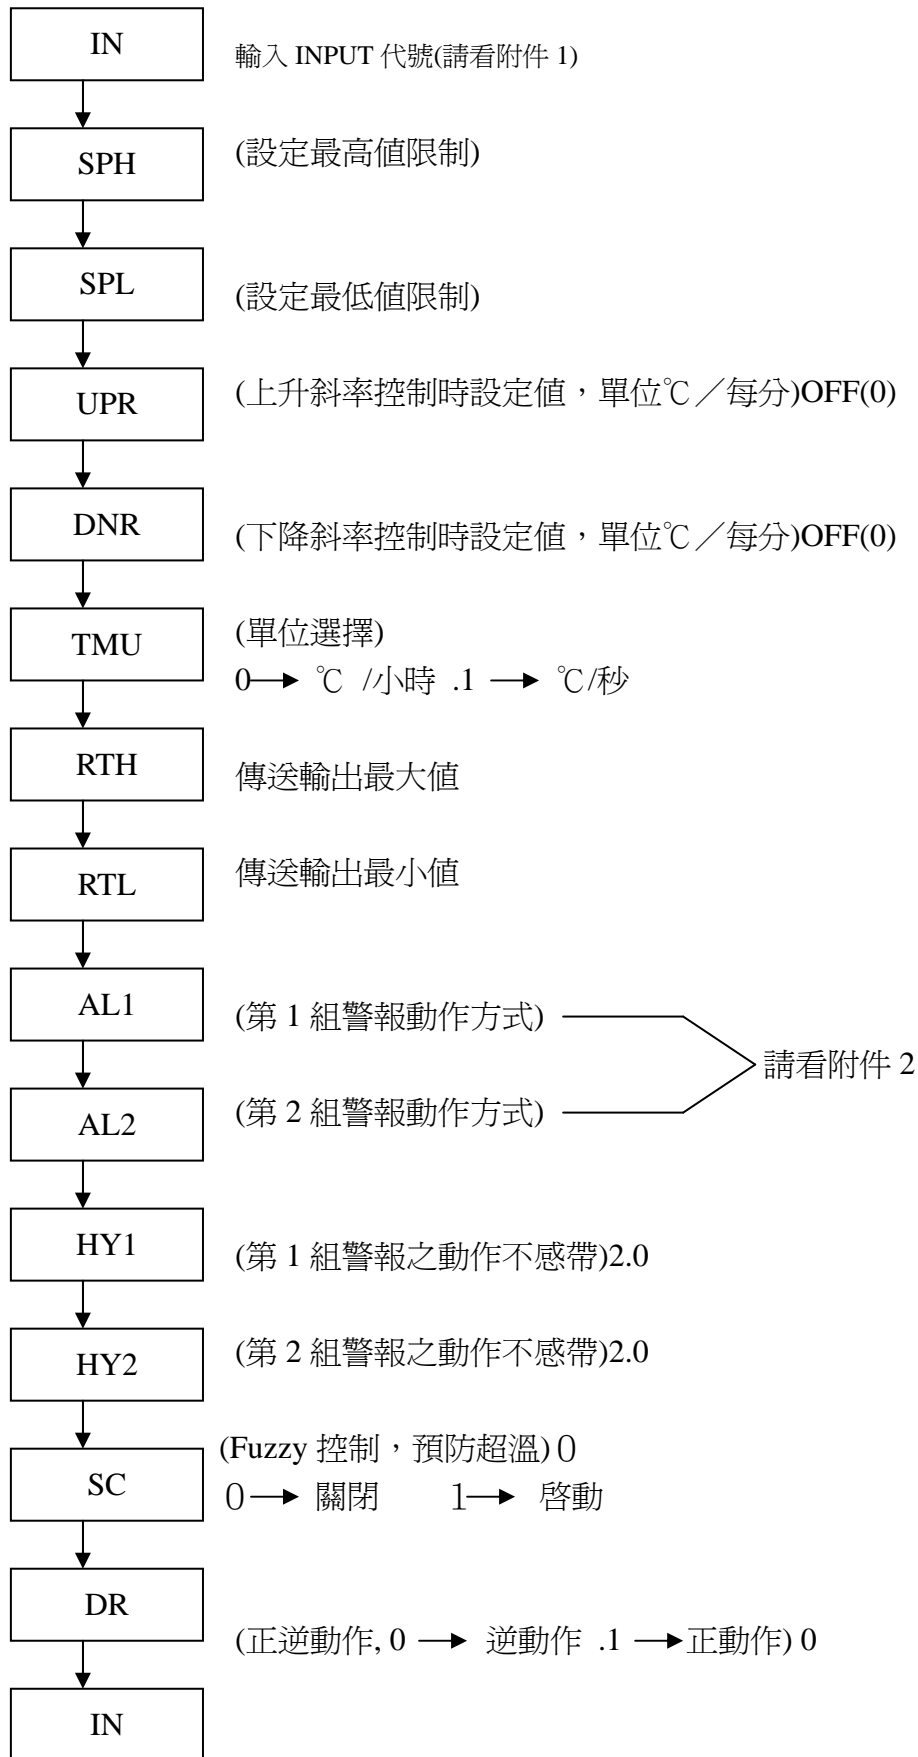

按 SET 鍵 3 秒退出

附件 1

Input type		Range(°C)		Range code(°C)	Range (°F)	Range code(°F)
Thermocouple	K	-270 to1370°C		1	-300 to2500°F	31
		0.0 to 600.0°C		2	32.0 to999.9°F	32
		0.0 to 400.0°C		3	32.0 to750.0°F	33
		-199.9 to200.0°C		4	-300 to 400°F	34
	J	-199.9 to999.9°C		5	-300 to2100°F	35
	T	-199.9 to 400.0°C		6	-300 to750°F	36
	E	-199.9 to 999.9°C		7	-300 to1800°F	37
	R	0 to1700°C		8	32 to3100°F	38
	S	0 to1700°C		9	32 to3100°F	39
	B	0 to1800°C		10	32 to3200°F	40
	N	-200 to1300°C		11	-300 to 2400°F	41
	L	-199.9 to900.0°C		12	-300 to1600°F	42
	U	-199.9 to 400.0°C		13	-300 to750°F	43
	Platine12	0 to1390°C		14	32 to 2500°F	44
RTD	Pt100	-199.9 to 850.0°C		15	-199.9 to 999.9°F	45
		0.0 to 400.0°C		16	32.0 to 750.0°F	46
		-199.9 to200.0°C		17	-300 to 400°F	47
		-19.9 to 99.9°C		18	-199.9 to 999.9°F	48
	J Pt100	-199.9 to 500.0°C		19		
DC voltage	0 to 100mv	0.0 to100.0	User-scalable	20		
	0 to5v	0.000 to 5.000		21		
	1 to5v	1.000 to 5.000		22		
	0 to10v	0.00 to10.00		23		

※UT150/UT152/UT155 Measured Input Ranges

附件 2

