



NOVA Series

ST590/580/570/560/540

Instruction Manual

DIGITAL CONTROLLER

Contents

| | |
|--|----|
| 1. Safety Guide | 3 |
| 2. Control Keys and Display | 5 |
| 3. Parameter Map | 6 |
| 4. Flow of Operating Display | 8 |
| 5. Setting Up Parameter in each Group | 9 |
| 5.1 Input Group(G.IN) | 9 |
| 5.2 Output Group(G.OUT) | 13 |
| 5.3 Control Group(G.CTL) | 16 |
| 5.4 SP Group(G.SP) | 19 |
| 5.5 PID Group(G.PID) | 21 |
| 5.6 Auto Tuning Group(G.AT) | 25 |
| 5.7 Alarm Group(G.ALM) | 27 |
| 5.8 Retransmission Group(G.RET) | 30 |
| 5.9 Communication Group(G.COM) | 31 |
| 6. Display Error and Correction | 33 |
| 7. Installation | 34 |
| 7.1 Dimension and Panel Cutout | 34 |
| 7.2 How to install Mount | 39 |
| 7.3 Power Cable Specification | 40 |
| 7.4 Terminal Specification | 40 |
| 7.5 Terminal Arrangement and External Wiring | 41 |

| | |
|---|----|
| 7.6 Grounding and Power Cable Connection | 46 |
| 7.7 Analog Input Connection | 46 |
| 7.8 Analog Output Connection | 47 |
| 7.9 External Contact Output Connection(RELAY) | 48 |
| 7.10 External Contact Input Connection(DI) | 48 |
| 7.11 Use an Auxiliary Relay | 48 |
| 7.12 Communication Wiring(RS485) | 49 |
| | |
| Attach. Table of D-Register | 50 |
| | |
| Table 1 : Type of Input Sensor | 9 |
| Table 2 : DI Operation | 16 |
| Table 3 : Type of Alarm | 28 |
| | |
| Fig 1 : Example of Piece Bias | 11 |
| Fig 2 : Example of Piece Bias Formula | 11 |
| Fig 3 : Example of Control Output (CT = 10 sec) | 14 |
| Fig 4 : Reserve Function of Running | 16 |
| Fig 5 : Overshoot Suppressing by Fuzzy Function | 21 |
| Fig 6 : Ex. Both Heat and Cool is under PID Control | 23 |
| Fig 7 : Ex. Heat = ON/OFF, Cool = PID Control | 23 |
| Fig 8 : Ex. Heat = PID, Cool = ON/OFF | 24 |
| Fig 9 : AUTO TUNING | 25 |
| Fig 10 : AT GAIN | 26 |
| Fig 11 : Alarm Operation | 28 |

1. Safety Guide

The following safety symbols are used in this manual

- (A) If this symbol is marked on the product, the operator must investigate the explanation given in this manual to protect injury or death to personnel or damage to instrument.



- (1) For Production : it should be marked when operator must refer the explanation in the manual to avoid loss of life or damage to instrument.
 (2) For Instruction Manual : it marks to avoid operator's loss of life and injury that may result comes from Electric Shock.

- (B) Functional earth terminal



It marks the terminal must be connected to Ground prior to operating the equipment.



Equipment protected by double or reinforced insulation

- (C) It marks additional Information on the operation and features of the product.



- (D) It marks for further information on the current topic and pages



Precautions on this instruction Manual

- (1) This Manual should be passed on the end User and keep a suitable place for operator to study and check the function of the product.
- (2) Operator should carefully study, understand how to operate this product before
- (3) This manual is describing the functions of the product. We, Samwontech, does not warrant that the functions will suit a particular purpose.
- (4) Under absolutely no circumstance may the contents of this manual in part or in whole be transcribed or copied without permission.
- (5) All contents of this manual has been made to ensure accuracy in the preparation, However, should any errors or omissions come to the attention of the user, feel free to contact our sales representatives or our sales office



Regarding Safety and Unauthorized Modification

- (1) In order to protect this product and the system controlled by it against damage and ensure its safe use, make certain that all of the safety instructions and precautions in this manual are strictly adhered to.
- (2) We, Samwontech, are not guarantee safety if the products are not handled according to this instruction manuals
- (3) If separate protection or safety circuits are to be installed for this product or the system which is controlled by this product, ensure that such circuits are installed external to the product.
- (4) Don't try to make modifications or additions internal to the product. It may becomes electric shock, burn or out of order.
- (5) In case of replacement parts or consumables of the product, must call to our sales office.
- (6) Protect this product from moisture. It may becomes out of order.
- (7) Protect any kind of shock and vibration to the product. It may becomes product defects and out of order



Regarding an exemption from responsibility

- (1) Samwontech co. Ltd does not make any warranties regarding the product except Warranty conditions those mentioned in this manual.
- (2) We assumes no liability to any party for any loss or damage, direct or indirect, caused by the use or any unpredictable defect of the product.



Regarding the production Quality Assurance.

- (1) The guaranteed period of the production quality assurance is (1) one year after end user buy it and it will be free to fix defected product under regular usage described by this manual.
- (2) It will be charged to fix defected product after warranty period. This charge will announced by our actual cost to be calculated during the fixing time.
- (3) It will be charging even if within warranty period as following events.
 - (3.1) Defect by operator and user's default.(forget password, production initialize)
 - (3.2) Natural disaster.(fire, water flow etc)
 - (3.3) Additional shift after 1st installed.
 - (3.4) Improperly repaired, or altered, modified in anyway.
 - (3.5) Power failure in unstable power condition.
- (4) Feel free to contact our sales office whenever it need to make A/S.



Environmental precautions for installation.


- (1) Be sure to operate the controller installed on a panel to prevent electric shock.
- (2) To install the controller, do select a location where:
 - No one may accidentally touch terminal.
 - Mechanical vibrations are minimal.
 - No corrosive gas is prevent.
 - Temperature fluctuation is minimal.
 - Temperature can be maintained. (50 °C below / 10 °C over)
 - No direct heat radiation is present.
 - No magnetic disturbances are caused
 - No water is splashed.
 - No flammable materials are around.
 - No wind blows. (prevent Dust with salt)
 - No ultraviolet rays are present.
 - Pollution Degree 2
 - Installation Category II
 - Do not block openings
 - If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
 - A switch or circuit-breaker acting as the disconnect device shall be included in the application or the building installation



Precautions of Controller Mounting.

- Keep the input circuit wiring as far as possible away from power and ground circuit.
- Keep the controllers in 10°C ~ 50°C/ 20 % ~ 90 % RH,
Warming up needed to use controller when temperature is below 10°C in advance.
- Do not mount front panel facing downward.
- To prevent electric shock, be sure to turn off and the source circuit breaker before wiring.
- The power consumptions are 100-240VAC, 50/60Hz, 10VAmx and operate without power switching in advance.
- No work in wet hands (it caused electric shock)
- Follow operation by precaution in the manual to avoid fire, electric shock, loss of life etc.
- Requested to follow mounting and operation methods just indicated in this manual.
- Refer the way of grounding connection, however, keep away for grounding to Gas pipe, water pipe, lightening rod etc.
- Be sure not to power connection before finishing of wiring between each contact point.
- Not close and wrapping the heat hole in back case of controller.

2. Control Keys and Display

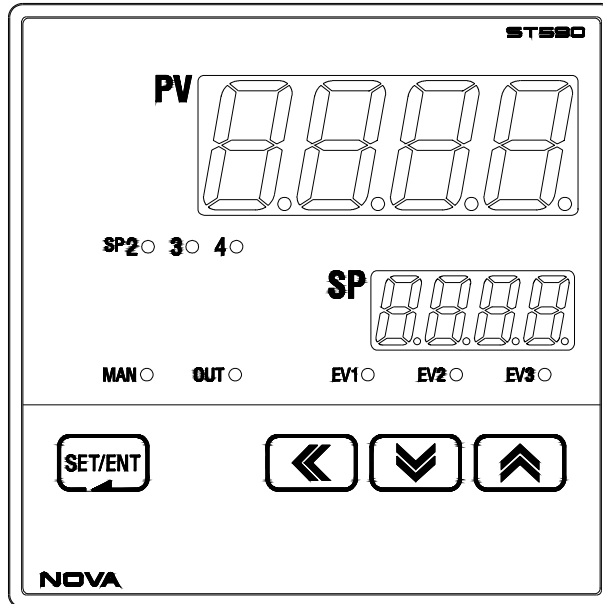


● Control Keys


| KEY | Contents |
|--------------------|--|
| SET/ENT (ENTER) | <ul style="list-style-type: none"> - Used in switching between parameters or registering parameter settings. - Pressing SET/ENT Key at least 3 sec. switches between an operating display and an operating parameter setting display |
| ▲ / ▼ (UP/DOWN) | <ul style="list-style-type: none"> - Used to change the value of parameters. - Used to move between GROUP and change SP value. |
| ◀ (SHIFT) | <ul style="list-style-type: none"> - Used when shifting position to modify value. |

● LED Display


| LED | Contents |
|----------------------------------|---|
| SP2,3,4 EV1,2,3 OUT MAN | <ul style="list-style-type: none"> - Lights on during SP operation. - Lights on during EVENT occurs.(such as signal occur for alarm) - Lights on when Control Output occur. - Lights on when Manual Mode operates. Or, LED blinking during AUTO-TUNING process. |

3. Parameter Map

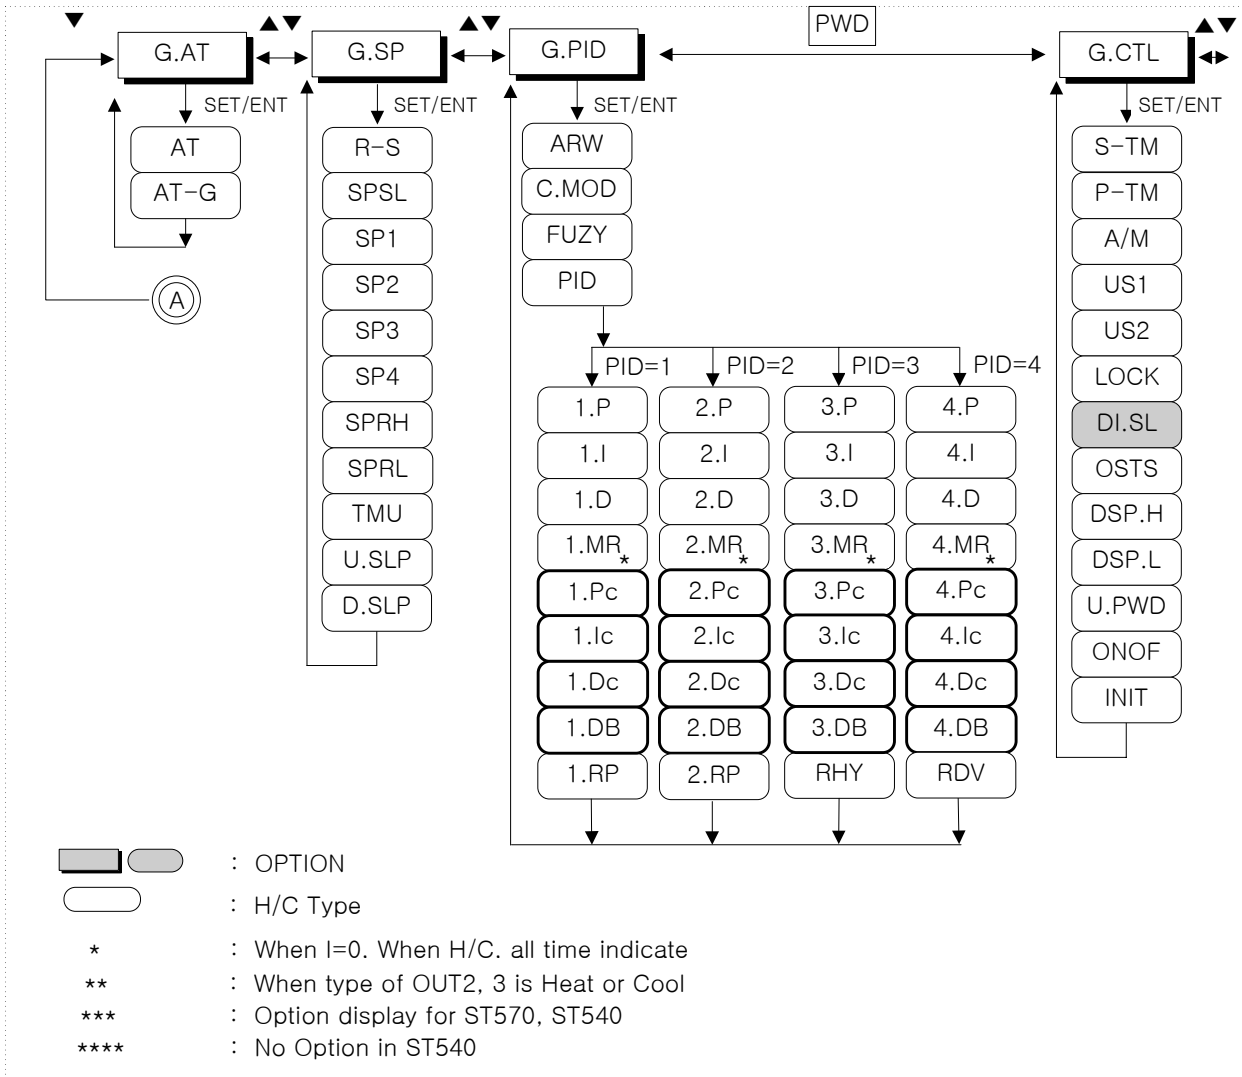

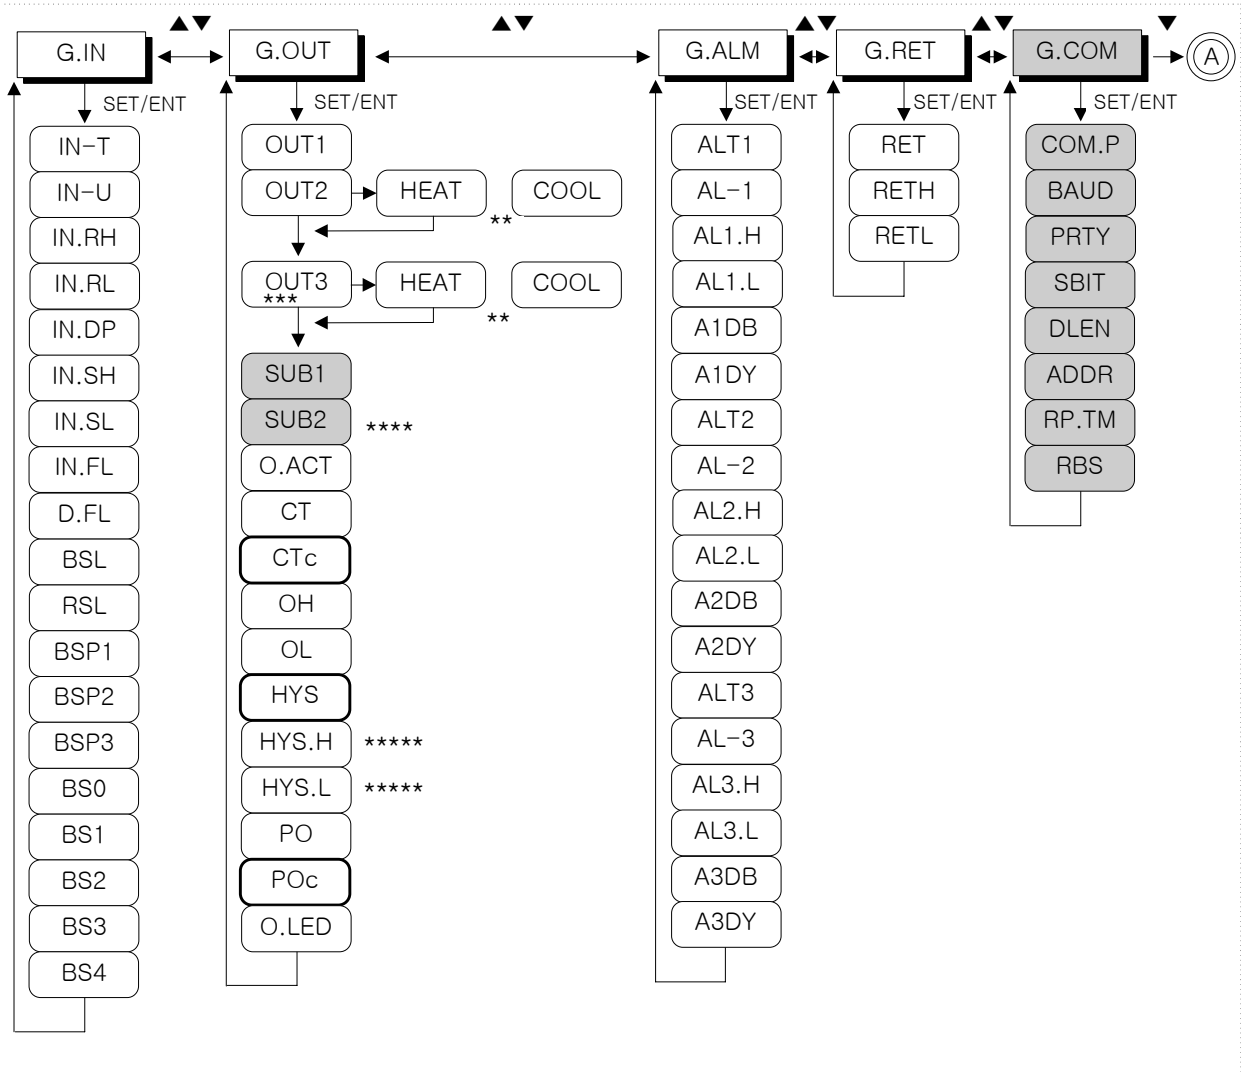

4. Flow of Operating Display

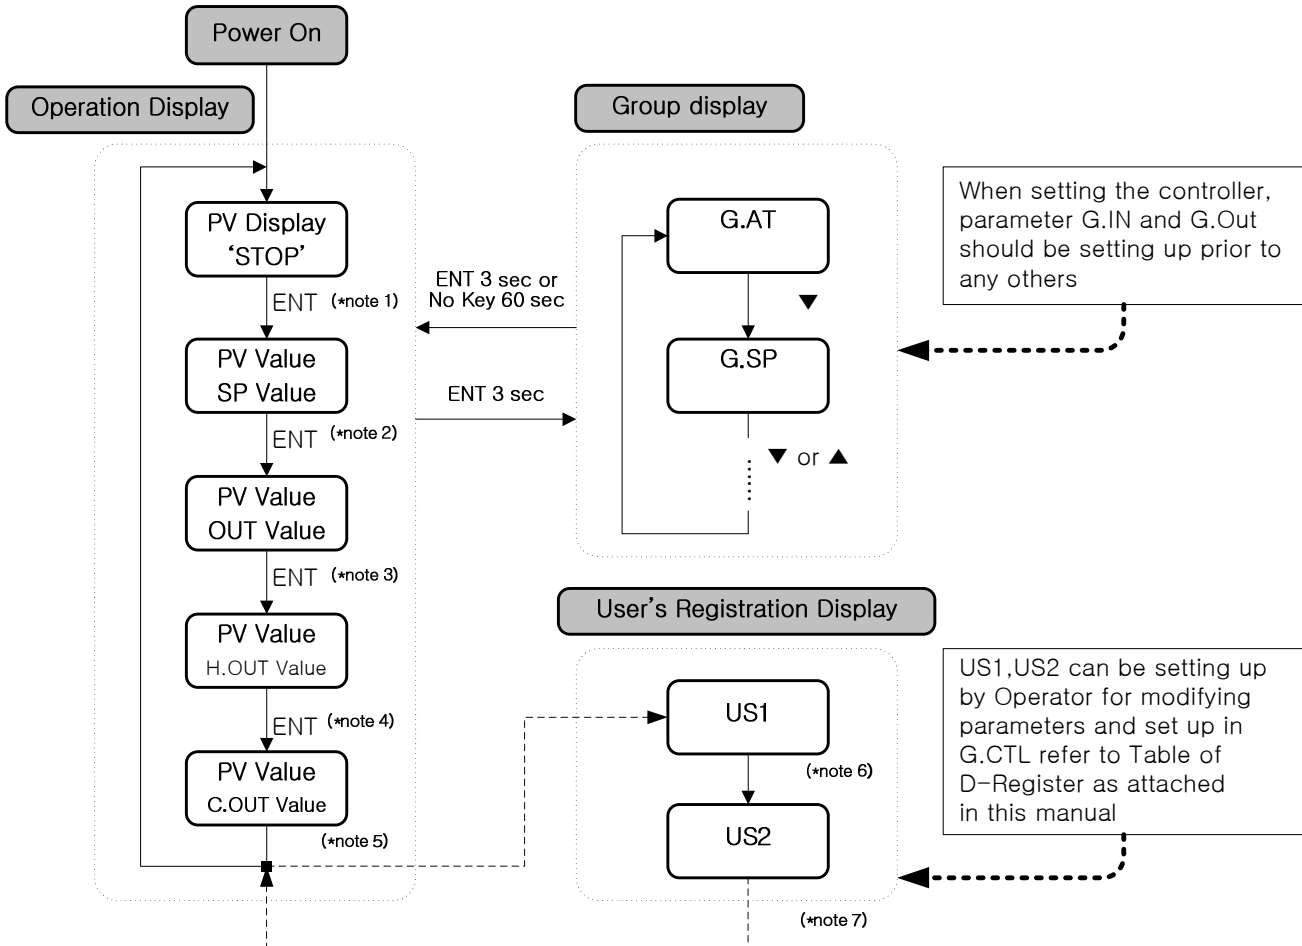

- (*note 1: Display 'STOP' when operates stopping.)
- it can be able to change SP Value when STOP operates)
- (*note 2: Operation Display-1 : Initial display after power on ; can set SP value.)
- (*note 3: Operation Display-2 : Output Control Display.)
- (*note 4: Heating Output Display in H/C type.)
- (*note 5: Cooling Output Display in H/C type.)
- (*note 6: When User Screen-1 is registered.)
- (*note 7: When User Screen-2 is registered.)

5. Setting Up Parameter in each Group.

5.1 Input Group(G.IN)

PV G.In

Press SET/ENT Key to select input group after press ▲ or ▼ Key in Menu display. (Refer to parameter Map in chapter 3.)



Change setting up parameters should be done for the first stage because it is suspended initializing parameters in other group around.















PV In-t


The parameter to select type of temperature sensor and its initial setting is type TC,K1.
Refer to following 'Table of Input Sensor' and select No shown in Table 1.

Table 1 : Type of Input Sensor

**display range : -5% ~ +105%*

| No. | TYPE | Temp.Range(°C) | Temp.Range(°F) | Group | DISP |
|-----|-------------|----------------|----------------|-------|-------|
| 1 | K1 | -200 ~ 1370 | -300 ~ 2500 | T/C | TC.K1 |
| 2 | K2 | -199.9 ~ 999.9 | 0 ~ 2300 | | TC.K2 |
| 3 | J | -199.9 ~ 999.9 | -300 ~ 2300 | | TC.J |
| 4 | E | -199.9 ~ 999.9 | -300 ~ 1800 | | TC.E |
| 5 | T | -199.9 ~ 400.0 | -300 ~ 750 | | TC.T |
| 6 | R | 0 ~ 1700 | 32 ~ 3100 | | TC.R |
| 7 | B | 0 ~ 1800 | 32 ~ 3300 | | TC.B |
| 8 | S | 0 ~ 1700 | 32 ~ 3100 | | TC.S |
| 9 | L | -199.9 ~ 900.0 | -300 ~ 1600 | | TC.L |
| 10 | N | -200 ~ 1300 | -300 ~ 2400 | | TC.N |
| 11 | U | -199.9 ~ 400.0 | -300 ~ 750 | | TC.U |
| 12 | W | 0 ~ 2300 | 32 ~ 4200 | | TC.W |
| 13 | Platinel II | 0 ~ 1390 | 32 ~ 2500 | | TC.PL |
| 14 | C | 0 ~ 2320 | 32 ~ 4200 | | TC.C |
| 15 | PtA | -199.9 ~ 850.0 | -300 ~ 1560 | RTD | PTA |
| 16 | PtB | -199.9 ~ 500.0 | -199.9 ~ 999.9 | | PTB |
| 17 | PtC | -19.99 ~ 99.99 | -4.0 ~ 212.0 | | PTC |
| 18 | JPtA | -199.9 ~ 500.0 | -199.9 ~ 999.9 | | JPTA |
| 19 | JPtB | -150.0 ~ 150.0 | -199.9 ~ 300.0 | | JPTB |
| 20 | 0.4 ~ 2.0V | 0.400 ~ 2.000V | | DCV | 2V |
| 21 | 1 ~ 5V | 1 ~ 5V | | | 5V |
| 22 | 0 ~ 10V | 0 ~ 10V | | | 10V |
| 23 | -10 ~ 20mV | -10 ~ 20mV | | mV | 20M |
| 24 | 0 ~ 100mV | 0 ~ 100mV | | | 100M |


| | |
|--|--|
| <p>PV </p> | <p>The parameter to select type of temperature unit for °C or °F. Its initial selection is °C type. Refer to Table 1 when change temperature unit.</p> |
| <p>PV </p> | <p>The parameter to set High-Limit for input temperature measuring range.</p> |
| <p>PV </p> | <p>The parameter to set Low-Limit for input temperature measuring range.</p> |
| <p>PV </p> | <p>The parameter to set the position of decimal value in case that sensor type is mV or V. The position if decimal value can change 0 ~ 3. its initial set value is '1'.</p> |
| <p>PV </p> | <p>The parameter to set High-Limit of input measuring scale in case that sensor type is mV or V. its initial value of 'In.SH' is '100.0'</p> |
| <p>PV </p> | <p>The parameter to set Low-Limit of input measuring scale in case that sensor type is mV or V. its initial value of 'In.SL' is '0.0'</p> |
| <p>PV </p> | <p>The parameter to set PV filter for stabilizing from electromagnetic noise etc. it may effect violation of PV value. Its initial value of 'In. FL' is OFF and can change 1 sec to 120 sec.</p> |
| <p>PV </p> | <p>The parameter to set for decreasing when PV is unstable due to sensitive sensor response under normal control.</p> |
| <p>PV </p> | <p>The parameter to set a direction of PV operation when sensor open. When set value of BSL is 'UP', PV operation is for High-Limit of Input Sensor. When set value of BSL is 'DOWN', PV operation is for Low-Limit of Input Sensor. Its initial setting is 'UP' (* in case of mV, V input, initialize 'OFF' and No checking Sensor-Open in 10V, 20mV, 100mV</p> |
| <p>PV </p> | <p>The parameter to set whether using RJC or not in case that input sensor is thermocouple. Its initial setting of 'rSL' is 'ON'</p> |
| <p>PV </p> <p>⋮</p> <p>PV </p> | <p>The parameter to set range of Bias in PV value enabling Bias process. Bias range can set Max 4. for further information, refer to Fig 1. and Fig 2.</p> |
| <p>PV </p> <p>⋮</p> <p>PV </p> | <p>The parameter to set Bias value of PV in Bias range. For further information, refer to Fig 1. and Fig 2.</p> |

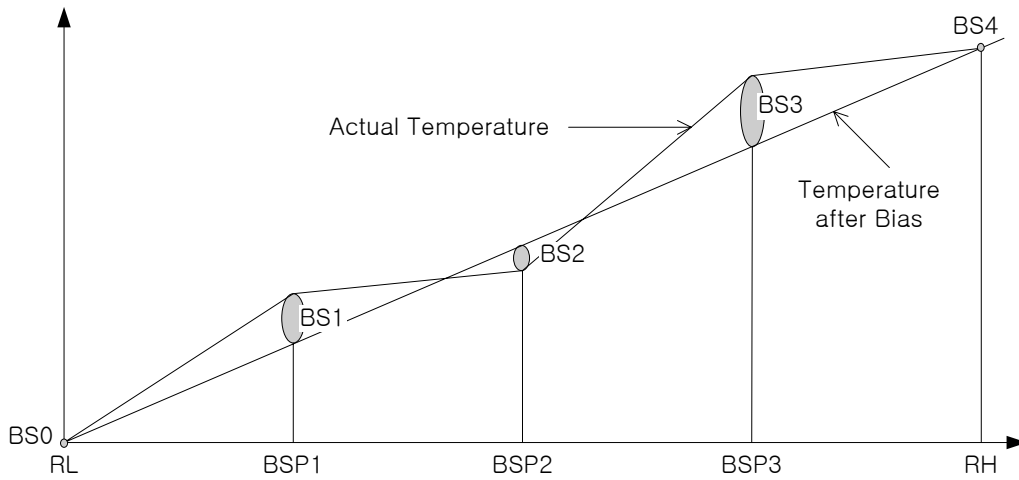

(Fig 1 : Example of Piece Bias)

Ex) There are +2°C in 25°C, -1°C in 50°C, +3°C in 75°C as temperature deviation in measuring actual temperature in range from 0°C to 100°C, and try to take a Piece Bias, each Bias set value are shown as belows(RL=0°C, BSP1=25°C, BSP2=50°C, BSP3=75°C, RH=100°C)

BS0=0°C, BS1=-2°C, BS2=+1°C, BS3=-3°C, BS4=0°C

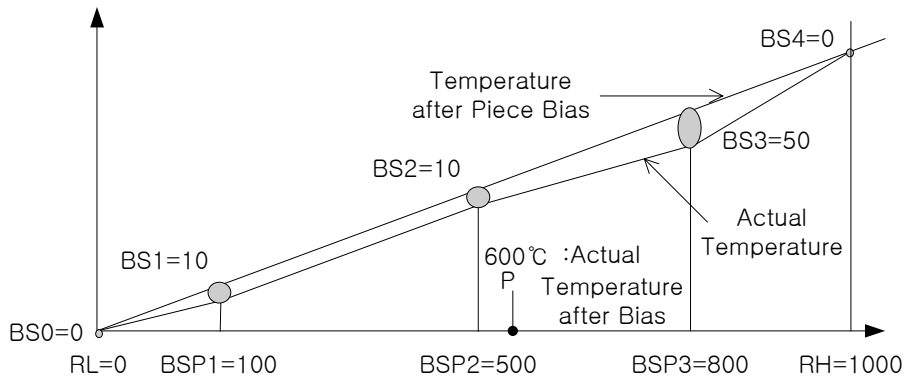

(Fig 2 : Example of Piece Bias Formula)









Temperature Bias Value = Temperature after Bias - Actual Temperature
 Temperature in 600°C(P) after Bias

$$P = 600 + (600 - BSP2) \times \frac{BS3 - BS2}{BSP3 - BSP2} + BS2$$

| Sym | Parameter | Setting Range | Unit | Initial | Remark |
|-------|---------------------------------|---|------|--------------|-------------------|
| IN-T | Input Type | Refer to Table 1 Type of Input Sensor | ABS | TC.K1 | All time indicate |
| IN-U | Display Unit | ℃ / °F | ABS | ℃ | T/C, RTD |
| IN.RH | Max. Value of Measurement Range | Within DEF. Range refer to Table 1 however, INRH > INRL | EU | 1370 | All time indicate |
| IN.RL | Min. Value of Measurement Range | | EU | -200 | All time indicate |
| IN.DP | Decimal Point Position | 0~3 | ABS | 1 | mV, V |
| IN.SH | Max Value of Input Scale | Within -1999~9999 however, INSH > INSL The Decimal Point Position is relay on the value of IN.DP | ABS | 100.0 | mV, V |
| IN.SL | Min Value of Input Scale | | | 0.0 | mV, V |
| IN.FL | PV Filter | OFF, 1~120 | sec | OFF | All time indicate |
| D.FL | Display Filter | OFF, 1~120 | sec | OFF | All time indicate |
| BSL | BOU SEL (note1) | OFF, UP, DOWN | ABS | UP (DCV=OFF) | All time indicate |
| RSL | RJC SEL | ON, OFF | ABS | ON | T/C |
| BSP1 | Reference Bias Point1 | EU(0.0~100.0%), RL≤BSP1≤BSP2≤BSP3≤RH | EU | EU(100.0%) | All time indicate |
| BSP2 | Reference Bias Point2 | EU(0.0~100.0%), RL≤BSP1≤BSP2≤BSP3≤RH | EU | EU(100.0%) | All time indicate |
| BSP3 | Reference Bias Point3 | EU(0.0~100.0%), RL≤BSP1≤BSP2≤BSP3≤RH | EU | EU(100.0%) | All time indicate |
| BS0 | Bias Value for RL Point | EUS(-100.0~100.0%) | EUS | 0 | All time indicate |
| BS1 | Bias Value for BSP1 Point | EUS(-100.0~100.0%) | EUS | 0 | All time indicate |
| BS2 | Bias Value for BSP2 Point | EUS(-100.0~100.0%) | EUS | 0 | All time indicate |
| BS3 | Bias Value for BSP3 Point | EUS(-100.0~100.0%) | EUS | 0 | All time indicate |
| BS4 | Bias Value for RH Point | EUS(-100.0~100.0%) | EUS | 0 | All time indicate |


(note 1) : S.OPN(Sensor-Open)=BOU(Burn-Out)

5.2 Output Group(G.OUT)


| | |
|---|--|
|  | <p>Press SET/ENT Key to select Output Group after press ▲ or ▼ Key in Menu display.</p> <pre> ▲▼ G.AT ↔ G.SP ↔ G.PID ↔ PWD ↔ G.CTL ↔ G.IN ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ G.COM ↔ G.RET ↔ G.ALM ↔ G.OUT ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ </pre> |
|  | <p>The parameter to set operation of output control (OUT 1 :RELAY OUTPUT) Value set in Heat, COOL, ALM1, ALM2, ALM3, RUN. Its initial setting is 'ALM1' (COOL is displayed in H/C Type, SKIP when ON/OFF Mode select)</p> |
|  | <p>The parameter to set operation of output control (OUT 2 : 4~20mV or Pulse Output). Value set in 'HEAT, COOL, RET'. Its initial setting is 'HEAT'. (COOL is displayed in H/C Type)</p> |
|  | <p>The parameter to set operation of output control (OUT 3: 4~20mV or Pulse Output). Value set in 'HEAT, COOL, RET'. Its initial setting is 'RET'. (COOL is displayed in H/C Type) (* ST570/540 can display when option select)</p> |
|  | <p>The parameter to set a type of control output when OUT 2 or OUT 3 sets in 'HEAT'. Value set in 'SSR (Pulse Output), SCR (4~20mV)'. Its initial setting is 'SSR'.</p> |
|  | <p>The parameter to set a type of control output when OUT 2 or OUT 3 sets in 'Cool'. Value set in 'SSR (Pulse Output), SCR (4~20mV)'. Its initial setting is 'SSR'</p> |
|  | <p>The parameter to set the operation of Auxiliary Output Control (SUB 1: Relay Output). Value set in 'HEAT, COOL, ALM1, ALM2, ALM3, RUN'. Its initial setting is 'ALM2'. (COOL is displayed in H/C Type) (* Display when option selects)</p> |
|  | <p>The parameter to set the operation of Auxiliary Output Control (SUB 2: Relay Output). Value sets in 'HEAT, COOL, ALM1, ALM2, ALM3, RUN'. Its initial setting is 'ALM3'. (COOL is displayed in H/C Type) (* Display when option selects, However no option in ST540)</p> |

※ Setting example of Output :

Control Output (OUT2 → SSR), Retransmission Output (OUT3 → RET), RELAY Output (OUT1 → ALM1, SUB1 → ALM2, SUB2 → ALM3)

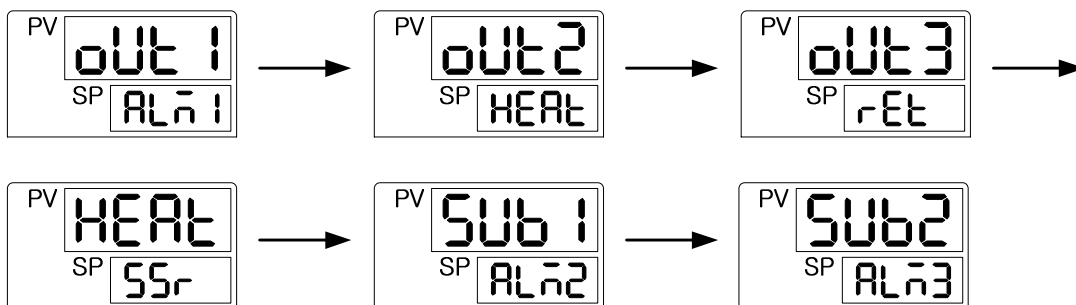


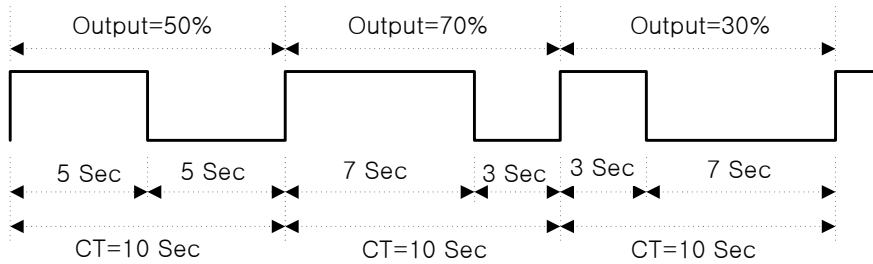

| | |
|-----------------------|--|
| <p>PV oAct</p> | <p>The parameter to set Reverse or Forward operation of Control Output. If 'O.Act' sets Reverse operation and PV value is lower the SP value, The control output is ON(Relay) or increase control output(SSR,SCR) If Forward operations, it works reverse. Its initial setting is 'REV'.</p> |
| <p>PV ct</p> | <p>The parameter to set one cycle time of control ON/OFF when control output sets up Time-proportional control output. Its setting range is 1 ~ 1000 sec and '2' sec as initial setting.</p> |
| <p>PV ctc</p> | <p>In Case that the cooling control output sets Time-proportional PID in H/C Type (Ex. OUT 1 =Cool, OUT 2,3 = Cool & Cool = SSR, SUB 1,2 = Cool), the parameter to set 1 cycle time for Output ON/OFF. Setting range is '1 ~ 1000 sec'. Its initial setting is '2 sec'.</p> |



(Fig 3 : Example of Control Output in CT = 10 Sec)

| | |
|-----------------------|---|
| <p>PV oH</p> | <p>To set High-Limited value of Control Output.</p> |
| <p>PV oL</p> | <p>To set Low-Limited Value of Control Output. Control Output is limited within High and Low limited value.</p> |
| <p>PV HYS</p> | <p>The parameter to set Hysteresis in case of On/Off Control Output in H/C type.</p> |
| <p>PV HYSH</p> | <p>The parameter to set Hysteresis High in case of On/Off Mode OUT1RLY Output in Normal type.</p> |
| <p>PV HYSL</p> | <p>The parameter to set Hysteresis Low in case of On/Off Mode OUT1RLY Output in Normal type.</p> |

| | |
|---|---|
|  | The parameter to set Preset Output value for emergency output. It makes output value in 'Po' after stopping control output calculated by PID algorithm when stop or A/D Error, Sensor open. |
|  | The parameter to set Preset Output value for emergency cooling output in H/C type. It makes a output set by POC, it stops to make output by PID calculation when stopping ,A/D ERROR or Sensor Open in AUTO Mode. |
|  | The parameter to set operation of MV OUT LAMP. SSR : MV LAMP is blinking within CT when SSR or Relay control output. SCR : MV LAMP is blinking irrespective of CT when SCR control output. |

| Sym | Parameter | Setting Range | Unit | Initial | Remark |
|-------|----------------------------|---|------|------------------|----------------------------|
| OUT1 | Select Output | HEAT, COOL, ALM1, ALM2, ALM3, RUN | ABS | ALM1 | All time indicate |
| OUT2 | Select Output | HEAT, COOL, RET | ABS | HEAT | All time indicate |
| OUT3 | Select Output | HEAT, COOL, RET | ABS | RET | (*note 1) |
| HEAT | Select Output Type | SSR, SCR | ABS | SSR | When OUT 2, 3 is in 'HEAT' |
| COOL | Select Output Type | SSR, SCR | ABS | SSR | When OUT 2, 3 is in 'Cool' |
| SUB1 | Select Output | HEAT, COOL, ALM1, ALM2, ALM3, RUN | ABS | ALM2 | Option |
| SUB2 | Select Output | HEAT, COOL, ALM1, ALM2, ALM3, RUN | ABS | ALM3 | (*note 2) |
| O.ACT | Reverse and Forward | REV, FWD | ABS | REV | All time indicate |
| CT | Cycle Time 1 | 1 ~ 300 sec | sec | 2 sec | All time indicate |
| CTc | Cycle Time 2 | 1 ~ 300 sec | sec | 2 sec | H/C TYPE |
| OH | High-Limit value of Output | OL-L+1Digit ~ 105.0% HC Type : 0 ~ 105.0%, However OH>OL | % | 100.0% | All time indicate |
| OL | Low-Limit value of Output | -5.0% ~ OL-H-1 digit HC Type : 0 ~ 105.0%, However OH>OL | % | 0% H/C:100.0% | All time indicate |
| HYS | HYSTERESIS | 0.0 ~ 10.0% | % | 0.5% | H/C TYPE |
| HYS.H | HYSTERESIS HIGH | EUS(0.0~10.0%) | EUS | EUS(0.5%) | ON/OFF MODE |
| HYS.L | HYSTERESIS LOW | EUS(0.0~10.0%) | EUS | EUS(0.5%) | ON/OFF MODE |
| PO | Preset Out1 | -5.0 ~ 105.0% H/C Type : 0.0 ~105.0% | % | 0.0% | All time indicate |
| POc | Preset Out2 | 0.0~105.0% | % | 0.0% | H/C TYPE |
| O.LED | OUTPUT LED | SCR, SSR | ABS | SSR | All time indicate |

(*note 1) : All time indicate (ST570, 540 is Option)

(*note 2) : Option (ST540 is SKIP)

※ Cool type will not workable at H/C Type.


※ OUT1, OH, OL is SKIP in ON/OFF Mode.(OUT1 is RLY control output)

5.3 Control Group(G.CTL)

| | |
|-------------------|---|
| PV GCTL | Press 'SET/ENT Key to select Control Group after press ▼ or ▲ Key in Menu display. <div style="text-align: center;"> ▲▼ G.AT ↔ G.SP ↔ G.PID ↔ PWD ↔ <u>G.CTL</u> ↔ G.IN ▲▼ G.COM ↔ G.RET ↔ G.ALM ↔ G.OUT </div> |
|-------------------|---|

| | |
|-------------------|--|
| PV S-TM | The parameter to set waiting time for Running when reserve function sets. 'S-TM' can set Max 99.59 min. Its initial setting is 'OFF' Refer to Reserve Function of Running shown as Fig. 4 |
|-------------------|--|

| | |
|-------------------|---|
| PV P-TM | The parameter to set running time of controller. 'P-TM' can set Max 99.59 min. Its initial setting is 'OFF' Refer to Reserve Function of Running shown as Fig. 4 |
|-------------------|---|

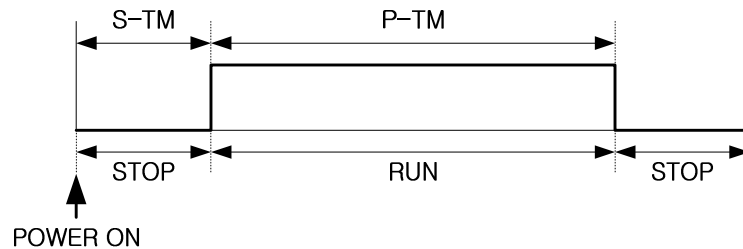

(Fig 4 : Reserve Function of Running)






| | |
|------------------|---|
| PV A/M | The parameter to set control mode. (AUTO or Manual) the Main LED lights on when 'A/M' sets MAN, Control output value can set by Pressing key-input. Its initial setting is 'AUTO' |
|------------------|---|

| | |
|------------------|--|
| PV US1 | The parameter to set User Screen for display, confirmation and common use of parameter. In order to register US1, 2, refer to the parameter number in 'Table of D-Register'. Its initial setting of US1, 2 is 'OFF'. |
| PV US2 | |

| | |
|-------------------|--|
| PV LoCE | The parameter to set parameter display for common using or checking. If LOCK sets 'ON', prohibit to set all parameter and SP value in operation display as well. |
|-------------------|--|



Table 2 : DI Operation

| DI.SL | DI1 | DI2 | Operation |
|-------|-----|-----|-----------|
| OFF | - | - | No work |
| 1 | off | - | HOLD OFF |
| | on | - | HOLD ON |
| | - | off | STEP OFF |
| | - | on | STEP ON |
| 2 | off | - | RESET |
| | on | - | PROG RUN |
| | - | off | PROG1 |
| | - | on | PROG2 |

| | |
|---|--|
| <p>PV </p> | <p>The parameter to set operation status of the controller in effect of external contact input when it sets option(/DI). The Controller operation of DI.SL setting is refer to 'Table of DI Operation' as shown on belows.</p> |
| <p>PV </p> | <p>The parameter to display control output status (OUT1, 2, 3, SUB 1, 2) of the controller to the operation display. You can check the control output status in operation display if 'oStS' sets.</p> |
| <p>PV </p> | <p>The parameter to set High-Limited value display of Sensor Input in PV display window. PV display window only shows the value of DSP.H even if it sets value higher than DSP.H from the sensor. But controller operates in actual value</p> |
| <p>PV </p> | <p>The parameter to set Low-Limited value display of Sensor Input in PV display window. PV display window only shows the value of DSP.L even if it sets value higher than DSP.L from the sensor. But controller operates in actual value</p> |
| <p>PV </p> | <p>The parameter to set PASSWORD in Controller. Set U/PWD in PASSWORD screen before entering control group (G.CTL) of parameter group. Not allow for entering parameter group if input value is not the same as registered password. Its initial setting U.PWD is '0'.</p> |




- Be sure not to forget PASSWORD after registration.
 - If Forget the PASSWORD, Not available for operator's maintenance.
- Need to return the controller for our service center and sales office.

| | |
|---|---|
| <p>PV </p> | <p>The parameter to set ON/OFF Mode. Control Output is OUT1(RLY) When set ON/OFF Mode.</p> |
| <p>PV </p> | <p>The parameter to initialize the controller. It is initialing when 'INIT' sets 'ON' (However, not allow communication for initializing)</p> |



It will be initialized all parameters of the controller when 'INIT' parameter sets.
Be sure to avoid any kind of inconvenience.

| Sym | Parameter | Setting Range | Unit | Initial | Remark |
|-------|--------------------------|---|------|------------|-------------------|
| S-TM | Start Time | OFF(0.00)~99.59(min) | TIME | OFF | All time indicate |
| P-TM | Process Time | OFF(0.00)~99.59(min) | TIME | OFF | All time indicate |
| A/M | AUTO, MAN | AUTO, MAN | ABS | AUTO | All time indicate |
| US1 | User Screen | OFF, D-Register Number(1 ~ 1299) | ABS | OFF | All time indicate |
| US2 | User Screen | OFF, D-Register Number(1 ~ 1299) | ABS | OFF | All time indicate |
| LOCK | Key Lock | OFF, ON (No Editing) | ABS | OFF | All time indicate |
| DI.SL | DI Selection | OFF, 1, 2 | ABS | OFF | DI Option |
| OSTS | OUTPUT STATUS | OFF, ON | ABS | OFF | All time indicate |
| DSP.H | Display High Limit | EU(-5.0~105.0%) : However, DSP.L<DSP.H | EU | EU(105.0%) | All time indicate |
| DSP.L | Display Low Limit | EU(-5.0~105.0%) : However, DSP.L<DSP.H | EU | EU(-5.0%) | All time indicate |
| U.PWD | User Password | 0~9999 | ABS | 0 | All time indicate |
| ONOF | ON/OFF Mode | ON, OFF | ABS | OFF | Except H/C TYPE |
| INIT | Parameter Initialization | OFF, ON | ABS | OFF | All time indicate |

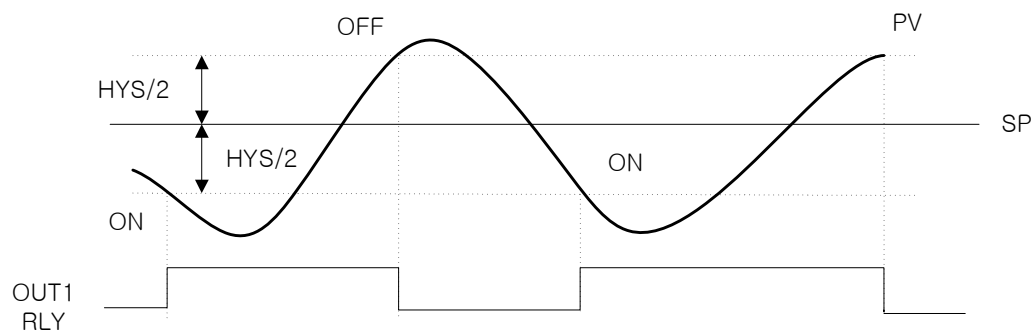


If HYS is 1.0 ON Range is HYS/2, OFF Range is HYS/2.

| Sym | Parameter | Setting Range | Unit | Initial | Remark |
|-------|----------------------|-------------------------------------|------|------------|-------------------|
| R-S | Run Stop | RUN, STOP | ABS | RUN | All time indicate |
| SPSL | SP SELECT | RSP, SP1, SP2, SP3, SP4 | ABS | SP1 | All time indicate |
| SP1 | Set Point 1 | EU(0.0 ~ 100.0%) | EU | EU(0.0%) | All time indicate |
| SP2 | Set Point 2 | EU(0.0 ~ 100.0%) | EU | EU(0.0%) | All time indicate |
| SP3 | Set Point 3 | EU(0.0 ~ 100.0%) | EU | EU(0.0%) | All time indicate |
| SP4 | Set Point 4 | EU(0.0 ~ 100.0%) | EU | EU(0.0%) | All time indicate |
| SPRH | Set Point Range High | EU(0.0 ~ 100.0%) | EU | EU(100.0%) | All time indicate |
| SPRL | Set Point Range Low | EU(0.0 ~ 100.0%) | EU | EU(0.0%) | All time indicate |
| TMU | Time Unit | HH.MM, MM.SS | ABS | HH.MM | All time indicate |
| U.SLP | Up Slope | OFF(0), EUS(0.0%+1digit~100.0%)/min | EU | OFF(0) | All time indicate |
| D.SLP | Down Slope | OFF(0), EUS(0.0%+1digit~100.0%)/min | EU | OFF(0) | All time indicate |

5.5 PID Group(G.PID)





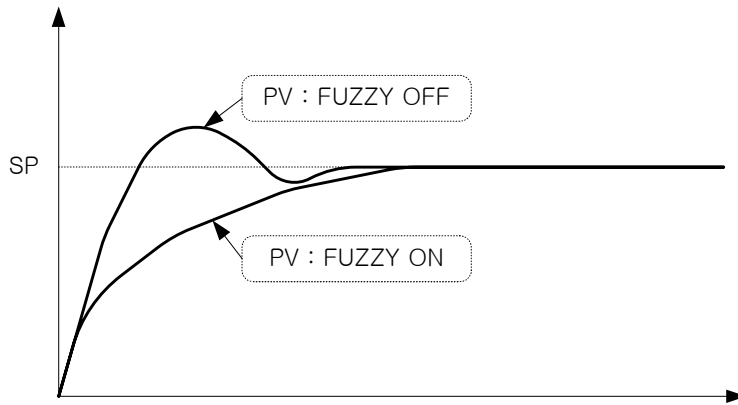






※ PID Group is SKIP in ON/OFF Mode.

| | |
|------------------------|---|
| <p>PV G.PID</p> | <p>Press SET/ENT Key to select PID Group after press ▲ or ▼ Key in Menu display</p> <pre> ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ G.AT ↔ G.SP ↔ <u>G.PID</u> ↔ PWD ↔ G.CTL ↔ G.IN ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ G.COM ↔ G.RET ↔ G.ALM ↔ G.OUT </pre> |
| <p>PV ARW</p> | <p>The parameter to set deviation width to prevent overshoot. When the control output reaches High-Limited value, for preventing Overshoot by integral action, it is stop ordinary action for integrals and shift for ARW(Anti-Reset Wind-Up). When the setting of 'ARW' is 'AUTO', it is acting automatically. Other setting is acting by setting value.</p> |
| <p>PV Cnod</p> | <p>Set D.DV or D.PV as PROG mode in PID control. If you select the D.DV on the control mode, overshoot is small but it take a long time for reaching the TSP because the MV variation rate is low. Selecting the D.PV, overshoot is big but it is faster than the D.DV for reaching the TSP because the MV variation rate is high.</p> |
| <p>PV FUZY</p> | <p>The parameter to select the use of 'Fuzzy' function. The function can be effective suppressing overshoot and reducing load variation that may occur when PV reaches SP. (Refer to 'Fig 5 Overshoot suppressing by Fuzzy function')</p> |




(Fig 5 Overshoot suppressing by Fuzzy function)


| | |
|-----------------------|--|
| <p>PV PI d</p> | <p>The parameter to set the number of PID Group to be acting one of two PID parameter when relative parameter sets.</p> |
| <p>PV IP</p> | <p>The parameter to set the proportional operation for PID control. Setting range of 'I.P.' is '0.1(H/C TYPE : 0.0) ~ 999.9%'. Its initial setting is '10.0%'.</p> |

| | |
|---|---|
| <p>PV </p> | <p>The parameter to set the integration time for PID control. Setting ranges of '1.I' are 'OFF', '1 ~ 6000 sec'. Its initial setting is 120 sec.</p> |
| <p>PV </p> | <p>The parameter to set derivation time for PID control. Setting ranges of '1.D' are 'OFF', '1 ~ 6000 sec'. Its initial setting is '30 sec'.</p> |
| <p>PV </p> | <p>The parameter to set apply for manual setting value in PID integral time contents when Integral time(I) of PID control is 'OFF'. Setting value of '1.MR(Manual Reset) is not workable when setting value of '1.I' is 'OFF'.(All time works in H/C Type)</p> |
| <p>PV </p> | <p>The parameter to set Proportional operation for PID control at cooling side in H/C type. Setting range of '1.Pc' is '0.0(when ON/OFF control), 0.1 ~ 999.9%'. Its initial setting is '10.0%'.</p> |
| <p>PV </p> | <p>The parameter to set Integral time for PID control at cooling side in H/C type. Setting range of '1.lc' is 'OFF, 1 ~ 6000 sec'. Its initial setting is '120 sec'.</p> |
| <p>PV </p> | <p>The parameter to set Derivative time for PID control at cooling side in H/C type. Setting range of '1.Dc' is 'OFF, 1 ~ 6000 sec'. Its initial setting is '30 sec'.</p> |
| <p>PV </p> | <p>The parameter to set DEAD BAND which is the are where the controller does not output from either the heating or cooling side.</p> |
| <p>⋮</p> | <p>※ The contents of PID Group number 2 is the same as PID Group number 1.</p> |
| <p>PV </p> | <p>The parameter to set divide each zone of 3 PID. It is setting for Number 1 in 'IN.RL(mV, IN.SL when input V-Sensor)~ 1.RP, and Number 2 in '1.RP ~ 2.RP, Number 3 in '2.RP ~ IN.RH (mV, IN.SH when input V-Sensor).</p> |
| <p>PV </p> | <p>The parameter to set divide each zone of 3 PID. It is setting for Number 1 in 'IN.RL(mV, IN.SL when input V-Sensor)~ 1.RP, and Number 2 in '1.RP ~ 2.RP, Number 3 in '2.RP ~ IN.RH (mV, IN.SH when input V-Sensor).</p> |
| <p>PV </p> | <p>The parameter to set hysteresis width of zone PID.</p> |
| <p>PV </p> | <p>The parameter to set deviation of deviation PID.</p> |


※ The operation for Heat/Cool is shown as Fig 6.7.8

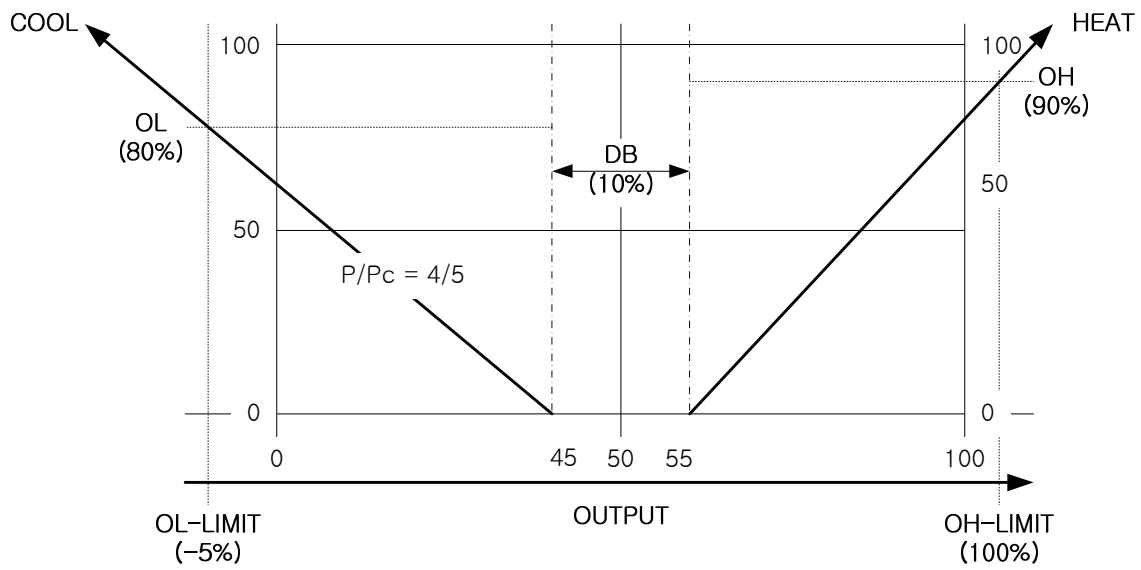

(Fig 6 : Ex. Both Heat and Cool is under PID Control)

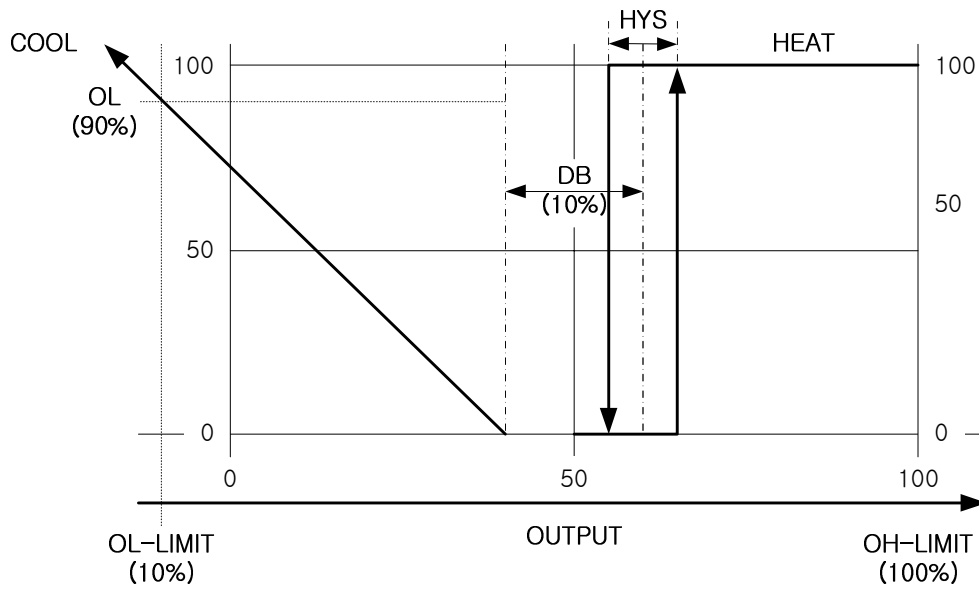

(Fig 7 : Ex. Heat = ON/OFF, Cool = PID Control)

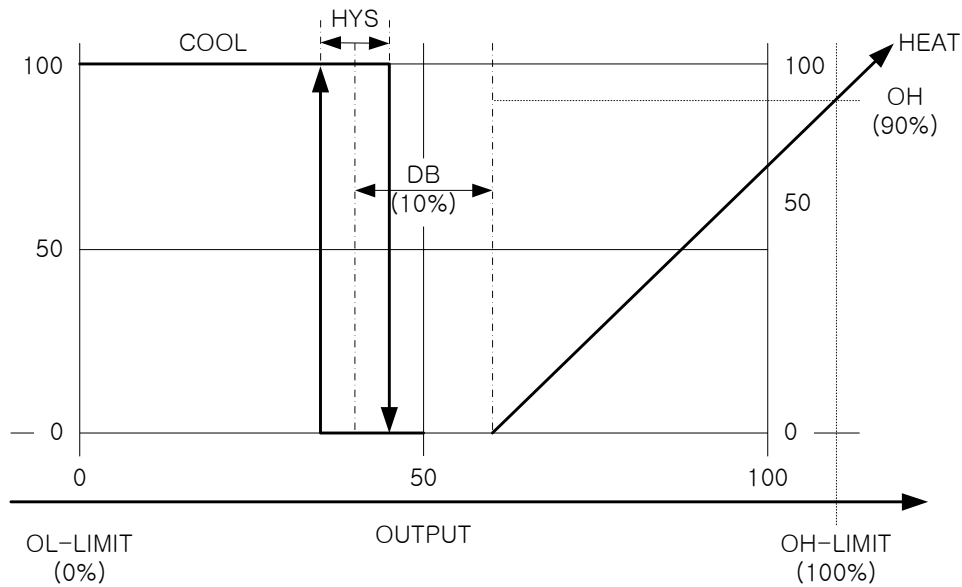

(Fig 8 : Ex. Heat = PID, Cool = ON/OFF

| Sym | Parameter | Setting Range | Unit | Initial | Remarks |
|-------|--------------------------------------|-----------------------------------|------|------------|----------------------------|
| ARW | Anti-Reset Wind-Up Select | Auto(0.0) ~ 200.0% | % | 100.0 | All time indicate |
| C.MOD | Control Mode | D.DV, D.PV | ABS | D.PV | All time indicate |
| FUZY | Fuzzy | OFF, ON | ABS | OFF | All time indicate |
| PID | PID Number | MENU(0) or 1 or 2 | ABS | MENU | All time indicate |
| n.P | n.Proportional Band | 0.1(H/C Type:0.0)~999.9% | % | 10.0% | All time indicate |
| n.I | n.Integral Time | OFF, 1 ~ 6000 sec | sec | 120 sec | All time indicate |
| n.D | n.Derivative Time | OFF, 1 ~ 6000 sec | sec | 30 sec | All time indicate |
| n.MR | n.Manual Reset | -5.0 ~ 105.0% | % | 50.0% | I=0, H/C=All time indicate |
| n.Pc | n.Proportional Band for cooling side | 0.0(ON/OFF Control), 0.1 ~ 999.9% | % | 10.0% | H/C TYPE |
| n.Ic | n.Integral Time for cooling side | OFF, 1 ~ 6000 sec | sec | 120 sec | H/C TYPE |
| n.Dc | n.Derivative Time for cooling side | OFF, 1 ~ 6000 sec | sec | 30 sec | H/C TYPE |
| n.DB | n.DEAD BAND | -100.0 ~ 15.0% | % | 3.0% | H/C TYPE |
| 1.RP | Reference Point1 | EU(0.0%) ≤ 1.RP ≤ 2.RP | EU | EU(100.0%) | PID 1Group |
| 2.RP | Reference Point2 | 1.RP ≤ 2.RP ≤ EU(100.0%) | EU | EU(100.0%) | PID 2Group |
| RHY | Reference Hysteresis | EUS(0.0 ~ 10.0%) | EU | EU(0.3%) | PID 3Group |
| RDV | Reference Deviation | EUS(0.0 ~ 100.0%) | EU | EU(0.0%) | PID 4Group |


5.6 Auto Tuning Group(G.AT)

※ AT Group is SKIP in ON/OFF Mode.

| | |
|--|--|
| <div style="border: 1px solid black; padding: 5px; display: inline-block;"> PV GAt </div> | Press SET/ENT Key to select Auto Tuning Group after press ▲ or ▼ Key in Menu display. <div style="text-align: center; margin-top: 10px;"> <p style="font-size: 0.8em; margin: 0;"> G.AT ↔ G.SP ↔ G.PID ↔ PWD ↔ G.CTL ↔ G.IN G.COM ↔ G.RET ↔ G.ALM ↔ G.OUT </p> </div> |
| <div style="border: 1px solid black; padding: 5px; display: inline-block;"> PV At </div> | The parameter to set AUTO TUNING carry on. When AT sets 'ON' AUTO TUNING carry on.(can set when operate Program Run) It will be skipped when sets 'STOP'. |

※ AUTO TUNING(AT)

- The AUTO TUNING is used to have the controller measure process characteristics and automatically set the most appropriate PID parameter. It makes ON/OFF control output to have Limit Cycle for control object and get the appropriate PID value calculated by steps and the responses.
- Methods of AUTO TUNING
 AUTO TUNING starts after TUNING Point for AUTO TUNING sets SP. The PID value sets automatically in PID zone positioned SP by setting up RP.

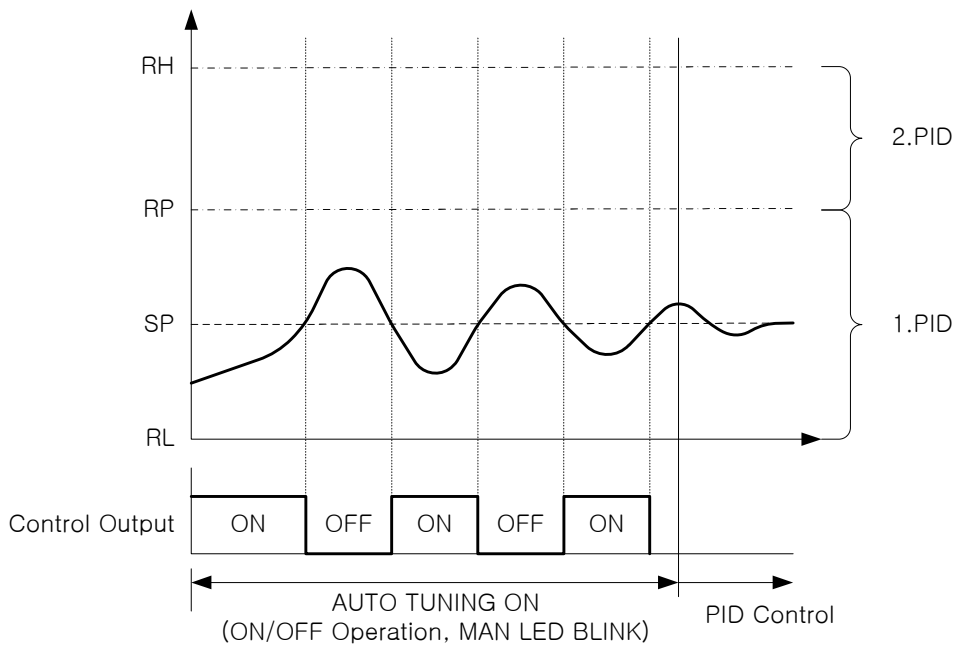


(Fig 9 : AUTO TUNING)

- AUTO TUNING during Heating/Cooling output.
 AUTO TUNING of Heating/Cooling output can calculate as the same way by using Heating/Cooling output.
 The I.D value of AUTO TUNING will be recorded as the same value for Heating/Cooling Side.
- Display during AUTO TUNING.
 Main LED is blinking 500ms with time interval.
- Change SP value during AUTO TUNING.
 If the SP is changed during AUTO TUNING, the Tuning Point is maintained. After AUTO TUNING, it starts control for changed SP value.
- Change PID parameter during AUTO TUNING.
 It can be changeable for PID value during AUTO TUNING however, it obtains by calculation automatically after AUTO TUNING. But, when compulsory ending of AUTO TUNING except normal operation, it is controlled by changed PID value.
- When abnormal Ending of AUTO TUNING.
 - ① Compulsory Ending of AUTO TUNING.
 - ② Input Sensor Open (S.OPN)during AUTO TUNING.
 - ③ Measuring Cycle of AUTO TUNING is exceeding 24hour.
 - ④ Change control mode to Manual(MAN) during the operation.

PV
AT-G

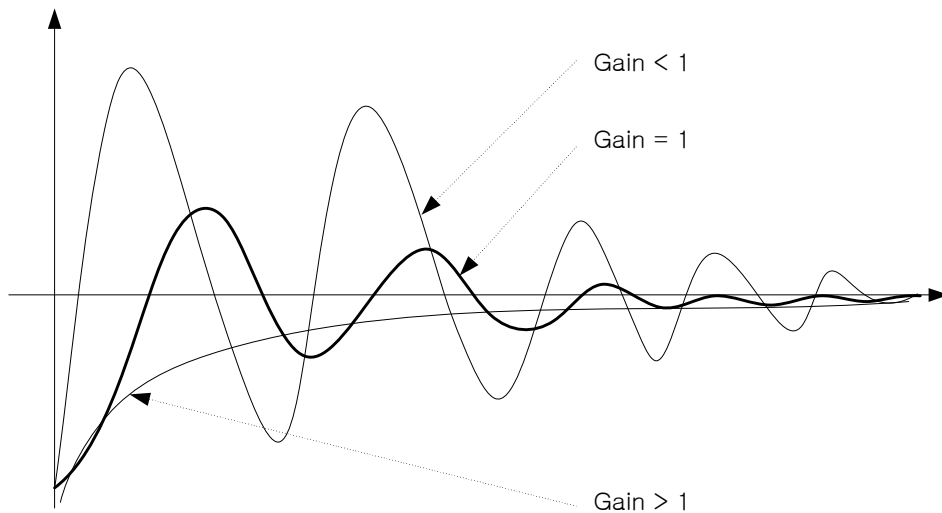






The parameter to setting for proportional PID value by obtaining AUTO TUNING. Reduce AT-G, Cycle time became rapid and, Increase AT-G, control status became more stable. If it is smaller, hunting become more and more.




(Fig 10 : AT GAIN)

| Sym | Parameter | Setting Range | Unit | Initial | Remark |
|------|-------------|---------------|------|---------|-----------|
| AT | Auto Tuning | OFF, ON | ABS | OFF | When AUTO |
| AT-G | AT Gain | 0.1 ~ 10.0 | ABS | 1.0 | When AUTO |

5.7 Alarm Group(G.ALM)

| | |
|---|---|
|  | <p>Press SET/ENT Key to select Alarm Group after press ▲ or ▼ Key in Menu display.</p> <pre> ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ G.AT ↔ G.SP ↔ G.PID ↔ PWD ↔ G.CTL ↔ G.IN ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ G.COM ↔ G.RET ↔ <u>G.ALM</u> ↔ G.OUT </pre> |
|  | <p>The parameter to set Alarm-1. The type of Alarm shown as 'Table 3 Type of Alarm'</p> |
|  | <p>The parameter to set Alarm point by setting 'ALT1'. (Display in the case of Upper-and-Lower-Limit alarm of set point)</p> |
|  | <p>Upper-Limit alarm in the case of Upper-Limit of Deviation, Upper-and-Lower-Limit alarm and within Upper-and-Lower-Limit Range of Deviation</p> |
|  | <p>Lower-Limit alarm in the case of Lower-Limit of Deviation, Upper-and-Lower-Limit alarm and within Upper-and-Lower-Limit Range of Deviation</p> |
|  | <p>The parameter to set DEAD BAND (Hysteresis) of Alarm-1.</p> |
|  | <p>The parameter to set Delay Time of Alarm-1 output.</p> |
| <p>· · ·</p> | <p>※ The contents of Alarm-2, 3 are the same as Alarm-1.</p> |

※ Alarm Type and Display

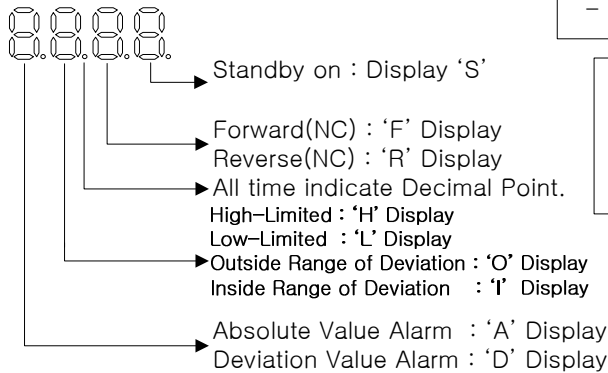


◎ Output
 - Forward : 'ON' in Alarm occur, otherwise 'OFF'.
 - Reverse : 'Off' in Alarm occur, otherwise 'ON'.

◎ Standby Condition
 - When Power on
 - When change SP value
 - When shifts Reset run to Program run.
 - when change the type of Alarm.

(Table 3 : Type of Alarm)

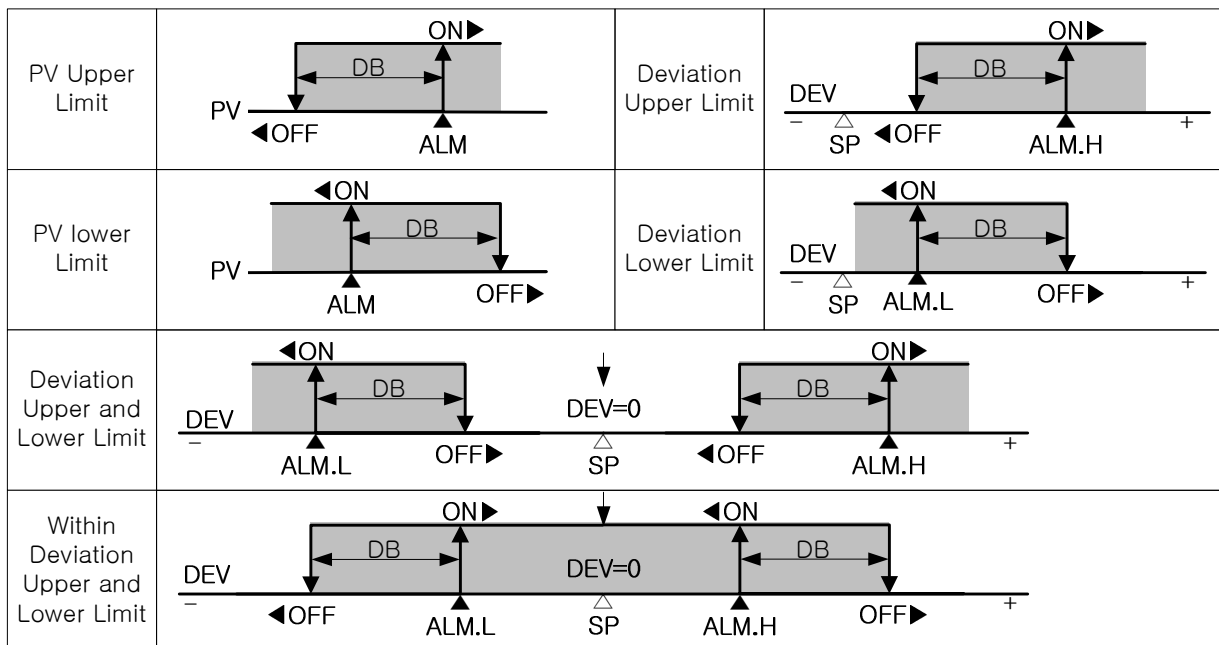



| No. | Alarm Type | Output Direct | | Standby | | Display Data |
|-----|---|---------------|-----|---------|-----|--------------|
| | | For | Rev | On | Off | |
| 1 | Absolute-Value Upper-Limit Alarm | ○ | | ○ | | AH.F |
| 2 | Absolute-Value Lower-Limit Alarm | ○ | | ○ | | AL.F |
| 3 | Upper-Limit Alarm of Deviation | ○ | | ○ | | DH.F |
| 4 | Lower-Limit Alarm of Deviation | ○ | | ○ | | DL.F |
| 5 | Upper-Limit Alarm of Deviation | | ○ | ○ | | DH.R |
| 6 | Lower-Limit Alarm of Deviation | | ○ | ○ | | DL.R |
| 7 | Upper-and-Lower-Limit alarm of Deviation | ○ | | ○ | | DO.F |
| 8 | Upper-and-Lower-Limit Range of Deviation | ○ | | ○ | | DI.F |
| 9 | Absolute-Value Upper Limit Alarm | | ○ | ○ | | AH.R |
| 10 | Absolute-Value Upper Limit Alarm | | ○ | ○ | | AL.R |
| 11 | Absolute-Value Upper-Limit Alarm with Standby | ○ | | | ○ | AH.FS |
| 12 | Absolute-Value Lower-Limit Alarm with Standby | ○ | | | ○ | AL.FS |
| 13 | Upper-Limit Alarm of Deviation with Standby | ○ | | | ○ | DH.FS |
| 14 | Lower-Limit Alarm of Deviation with Standby | ○ | | | ○ | DL.FS |
| 15 | Lower-Limit Alarm of Deviation with Standby | | ○ | | ○ | DH.RS |
| 16 | Upper-Limit Alarm of Deviation with Standby | | ○ | | ○ | DL.RS |
| 17 | Upper-and-Lower-Limit Alarm of Deviation with Standby | ○ | | | ○ | DO.FS |
| 18 | Upper-and-Lower-Limit Range Alarm of Deviation with Standby | ○ | | | ○ | DI.FS |
| 19 | Absolute-Value Upper-Limit Alarm with Standby | | ○ | | ○ | AH.RS |
| 20 | Absolute-Value Lower-Limit Alarm with Standby | | ○ | | ○ | AL.RS |




(Fig 11 : Alarm Operation)

| Sym | Parameter | Setting Range | Unit | Initial | Remark |
|-------|-------------------------------|------------------------------------|-------|------------|---------------------|
| ALT1 | Alarm Type 1 | Refer to (Table 3 : Type of Alarm) | ABS | AH.F | All time indicate |
| AL-1 | Set value of ALT1 | EU(-100.0~100.0%) | EU | EU(100.0%) | Not deviation alarm |
| AL1.H | Upper-Limit of set value ALT1 | EUS(-100.0~100.0%) | EUS | EUS(0.0%) | Deviation alarm |
| AL1.L | Lower-Limit of set value ALT1 | EUS(-100.0~100.0%) | EUS | EUS(0.0%) | Deviation alarm |
| A1DB | Alarm Type1 DB | EUS(0.0~100.0%) | EUS | EUS(0.5%) | All time indicate |
| A1DY | Delay Time of Alarm 1 | 0.00~99.59 (MM:SS) | MM.SS | 0.00 | All time indicate |
| ALT2 | Alarm Type 2 | Refer to (Table 3 : Type of Alarm) | ABS | AH.F | All time indicate |
| AL-2 | Set value of ALT2 | EU(-100.0~100.0%) | EU | EU(100.0%) | Not deviation alarm |
| AL2.H | Upper-Limit of set value ALT2 | EUS(-100.0~100.0%) | EUS | EUS(0.0%) | Deviation alarm |
| AL2.L | Lower-Limit of set value ALT2 | EUS(-100.0~100.0%) | EUS | EUS(0.0%) | Deviation alarm |
| A2DB | Alarm Type2 DB | EUS(0.0~100.0%) | EUS | EUS(0.5%) | All time indicate |
| A2DY | Delay Time of Alarm 2 | 0.00~99.59 (MM:SS) | MM.SS | 0.00 | All time indicate |
| ALT3 | Alarm Type 3 | Refer to (Table 3 : Type of Alarm) | ABS | AH.F | All time indicate |
| AL-3 | Set value of ALT3 | EU(-100.0~100.0%) | EU | EU(100.0%) | Not deviation alarm |
| AL3.H | Upper-Limit of set value ALT3 | EUS(-100.0~100.0%) | EUS | EUS(0.0%) | Deviation alarm |
| AL3.L | Lower-Limit of set value ALT3 | EUS(-100.0~100.0%) | EUS | EUS(0.0%) | Deviation alarm |
| A3DB | Alarm Type3 DB | EUS(0.0~100.0%) | EUS | EUS(0.5%) | All time indicate |
| A3DY | Delay Time of Alarm 3 | 0.00~99.59 (MM:SS) | MM.SS | 0.00 | All time indicate |


5.8 Retransmission Group(G.RET)

| | |
|--|--|
|  | <p>Press SET/ENT Key to select Retransmission Group after press ▲ or ▼ Key in Menu display</p> <pre style="text-align: center;"> ▲▼ G.AT ↔ G.SP ↔ G.PID ↔ PWD ↔ G.CTL ↔ G.IN ▲▼ G.COM ↔ <u>G.RET</u> ↔ G.ALM ↔ G.OUT ▲▼ </pre> |
|  | <p>The parameter to set the type of retransmission. There are 'LPS', 'PV', 'SP', 'MV' in the type of retransmission. Its initial setting is 'PV'. (LPS : Sensor Supply Power, 18V)</p> |
|   | <p>The parameter to set High and low limits for a Retransmission output. When Retransmission output is specified to 'PV' or 'SP', the output range is scaled according to the RETH and RETL setting. (High Limit : 20mA output scale, Low Limit : 0 or 4mA output scale) * if Retransmission output is specified to 'MV', it is not display of RETH and RETL parameter and it displays RETH = 100.0%, RETL = 0.0% fixed.</p> |

※ In Case the Type of Retransmission is 'PV' or 'SP'.

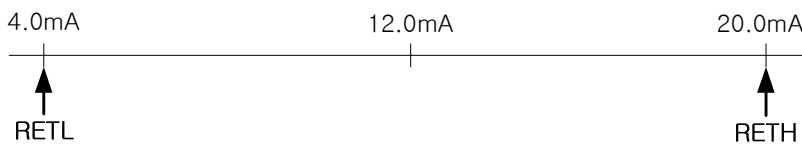

※ In Case the Type of Retransmission is 'MV'

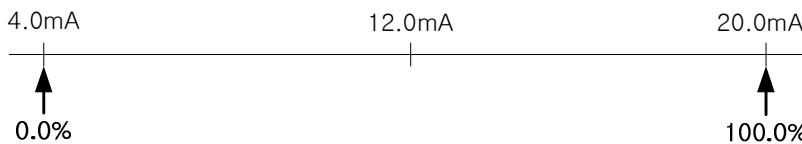

| Sym | Parameter | Setting Range | Unit | Initial | Remark |
|------|--------------------------------------|---|------|---------|----------------------------|
| RET | Select RET | LPS, PV, SP, MV | ABS | PV | All time indicate |
| RETH | High-Limited Value of Retransmission | T/C, RTD : INRH ~ INRL mV, V : INSH ~ INSL 단, RETH > RETL | EU | INRH | When select RET='PV', 'SP' |
| RETL | Low-Limited Value of Retransmission | | EU | INRL | |

5.9 Communication Group(G.COM)

| | |
|-----------------------|---|
| <p>PV GCoñ</p> | <p>Press SET/ENT Key to select Communication Group after press ▲ or ▼ Key in Menu display.</p> <pre> ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ G.AT ↔ G.SP ↔ G.PID ↔ PWD ↔ G.CTL ↔ G.IN ▲▼ ▲▼ ▲▼ ▲▼ ▲▼ G.COM ↔ G.RET ↔ G.ALM ↔ G.OUT ▲▼ ▲▼ ▲▼ ▲▼ </pre> |
| <p>PV CoñP</p> | <p>The parameter to set communication Protocol.</p> |
| <p>PV bAUD</p> | <p>The parameter to set communication speed (BAUD RATE). The setting range of BAUD RATE is 600 ~ 19200 bys. Its initial setting is '9600'bps.</p> |
| <p>PV PrtY</p> | <p>The parameter to set Communication Parity. The setting range are 'None', 'Even', 'ODD'. Its initial setting is 'None'.</p> |
| <p>PV Sbit</p> | <p>The parameter to set Communication Stop Bit. The setting range is '1' or '2'. Its initial setting is '1'.</p> |
| <p>PV dLEn</p> | <p>The parameter to set Communication Data Length. The setting range is '7' or '8'. Its initial setting is '8'. Parameter 'DLEN' is not display when 'COM.P' sets 'MODBUS ASCII' or 'RTU'.</p> |
| <p>PV Addr</p> | <p>The parameter to set Communication Address for controller. The setting range is 1 ~ 99 Pcs Address. its initial setting is '1'.</p> |
| <p>PV rPtn</p> | <p>The parameter to set Communication Response Time. The RP.TM is a Waiting Time to return upper device after processing received commands when controller received it from upper device. The setting of RP.TM is setting by 10 msec times. In case of RP.TM = 0, If the processing of commands is over, it returns response to upper device.</p> |
| <p>PV rbs</p> | <p>In the Case of Master-Slaver, The set point which it comes to give to the Slave is decide with the sum of RBS and Master SP. (If communication protocol is changed, It is initialized)</p> |

| Sym | Parameter | Setting Range | Unit | Initial | Remark |
|-------|------------------------|---|------|---------|--------|
| COM.P | Communication Protocol | PCC0, PCC1, MODBUS ASCII, MODBUS RTU, SYNC-Master | ABS | PCC0 | Option |
| BAUD | Baud Rate | 600, 1200, 2400, 4800, 9600, 19200 | ABS | 9600 | Option |
| PRTY | Parity | None, Even, Odd | ABS | None | Option |
| SBIT | Stop Bit | 1, 2 | ABS | 1 | Option |
| DLEN | Data Length | 7, 8(SKIP when MODBUS) | ABS | 8 | Option |
| ADDR | Address | 1 ~ 99(Max 31 can connect) | ABS | 1 | Option |
| RP.TM | Response Time | 0 ~ 10(×10ms) | ABS | 0 | Option |


6. Display Error and Correction

| Display ERROR | ERROR Contents | Correction |
|---------------------------|------------------------|------------------|
| E.SYS | EEPROM, DATA Loss | Ask repair |
| E.RJC | RJC SENSOR Failure | Ask repair |
| Flash Decimal point of SP | Communication Failure | Comm Cable CHECK |
| S.OPN | SENSOR Open | SENSOR CHECK |
| E.AT | AT Time Out (24h over) | PROCESS CHECK |





7. Installation

7.1 Dimension and Panel Cutout

ST590

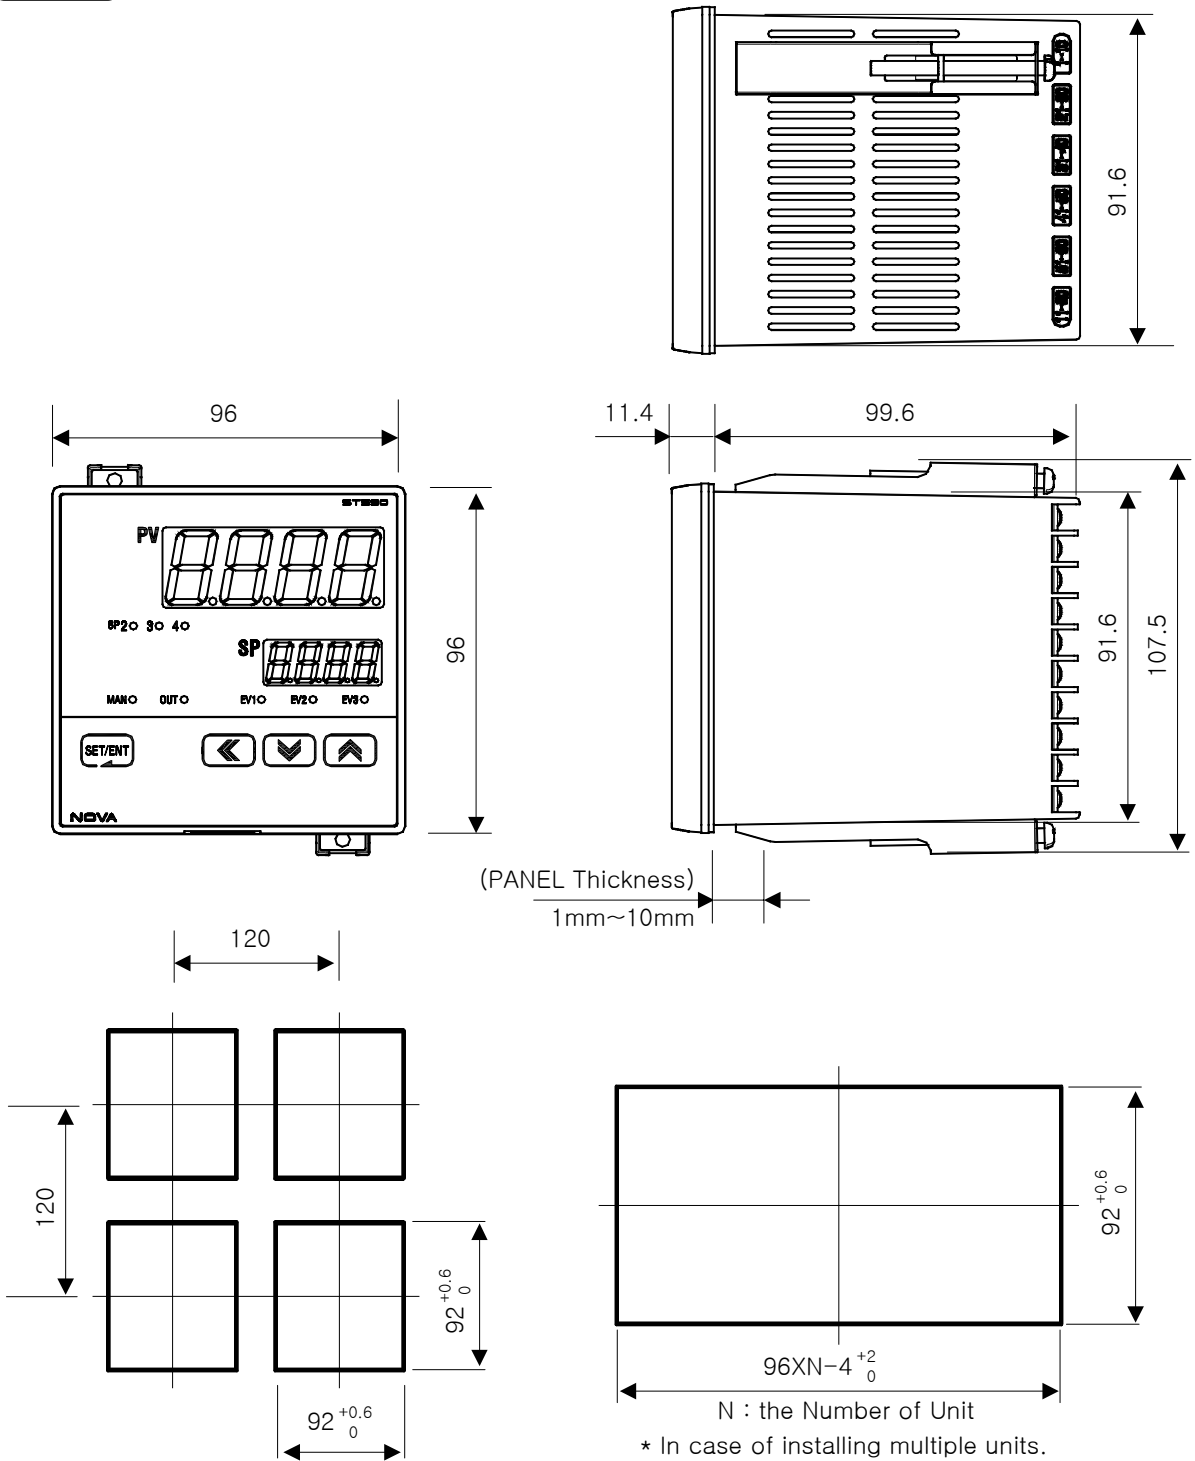


ST580

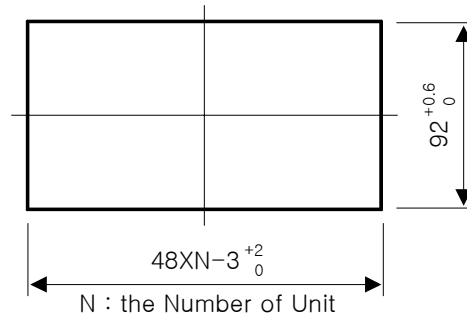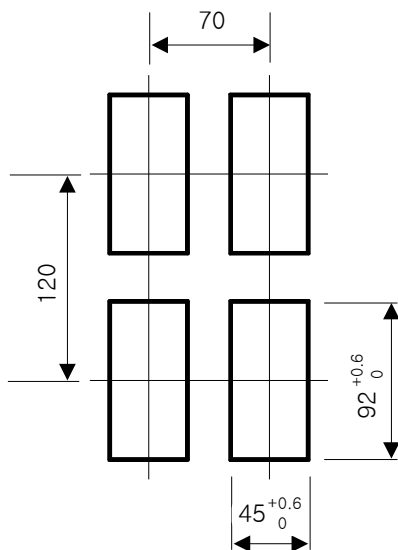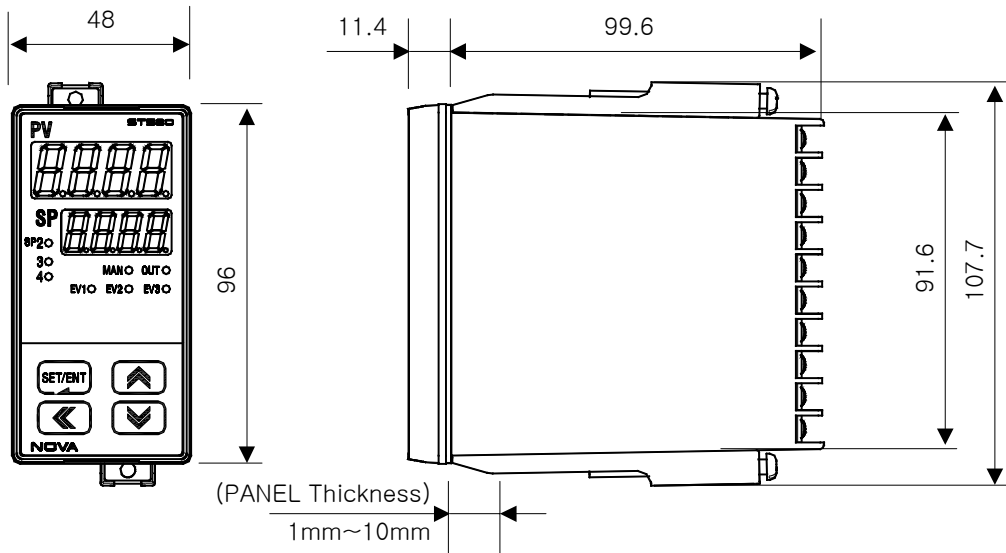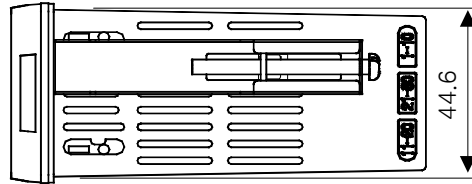


* In case of installing multiple units.



ST570

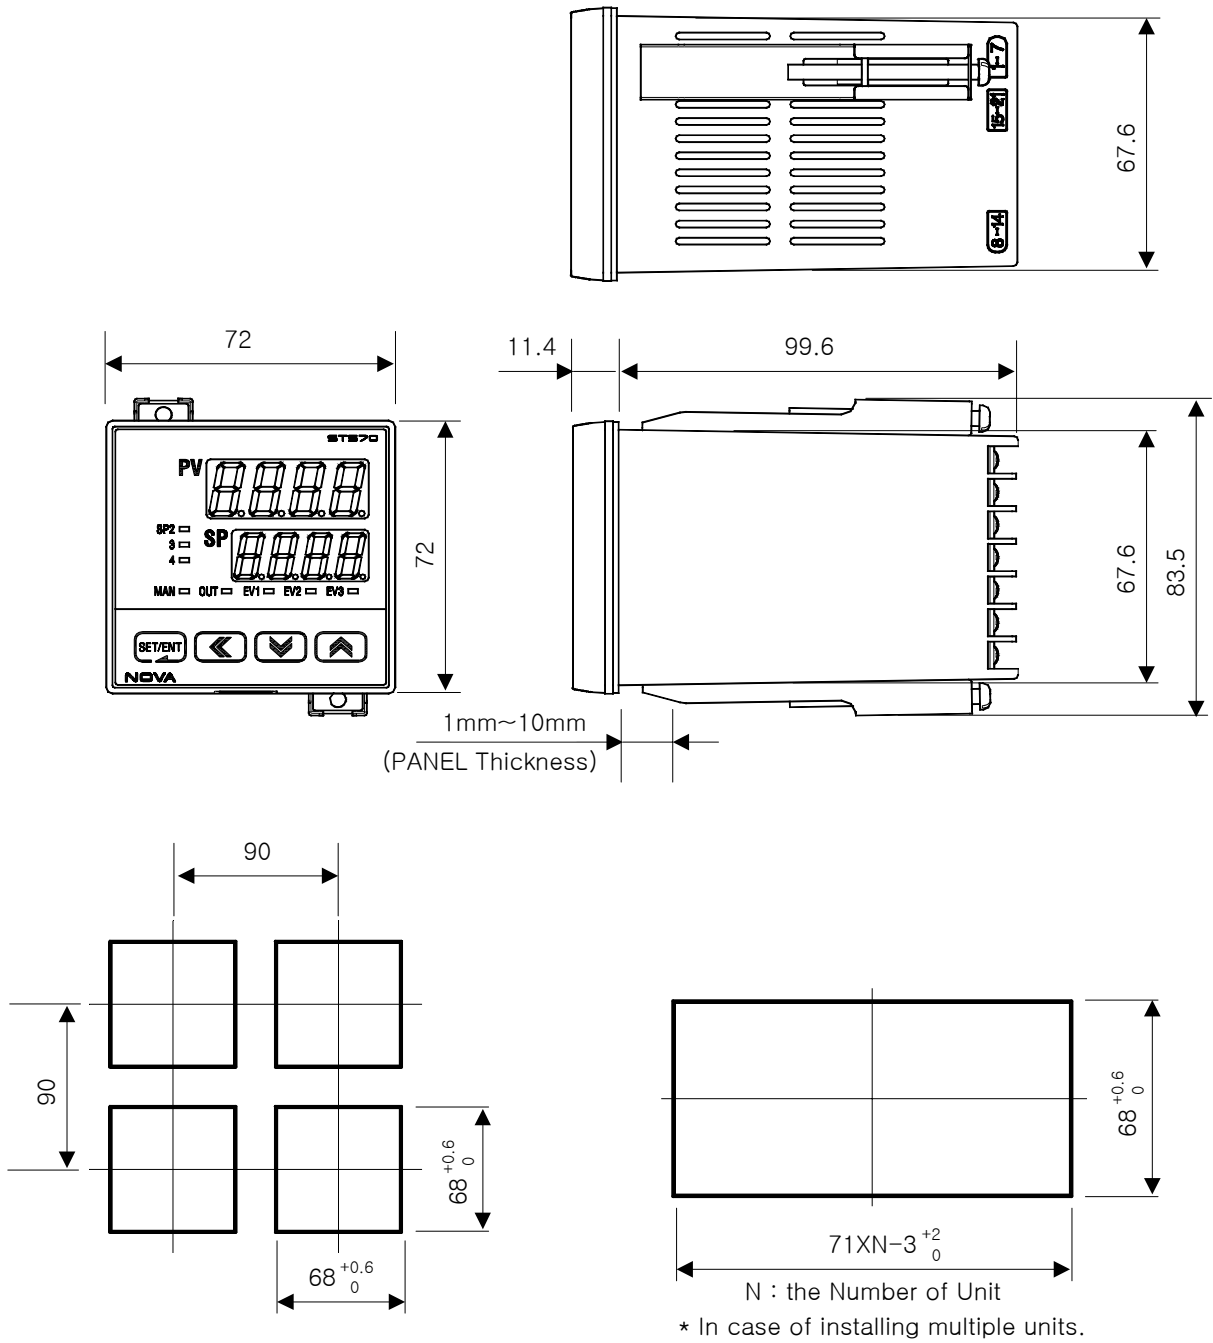


ST560

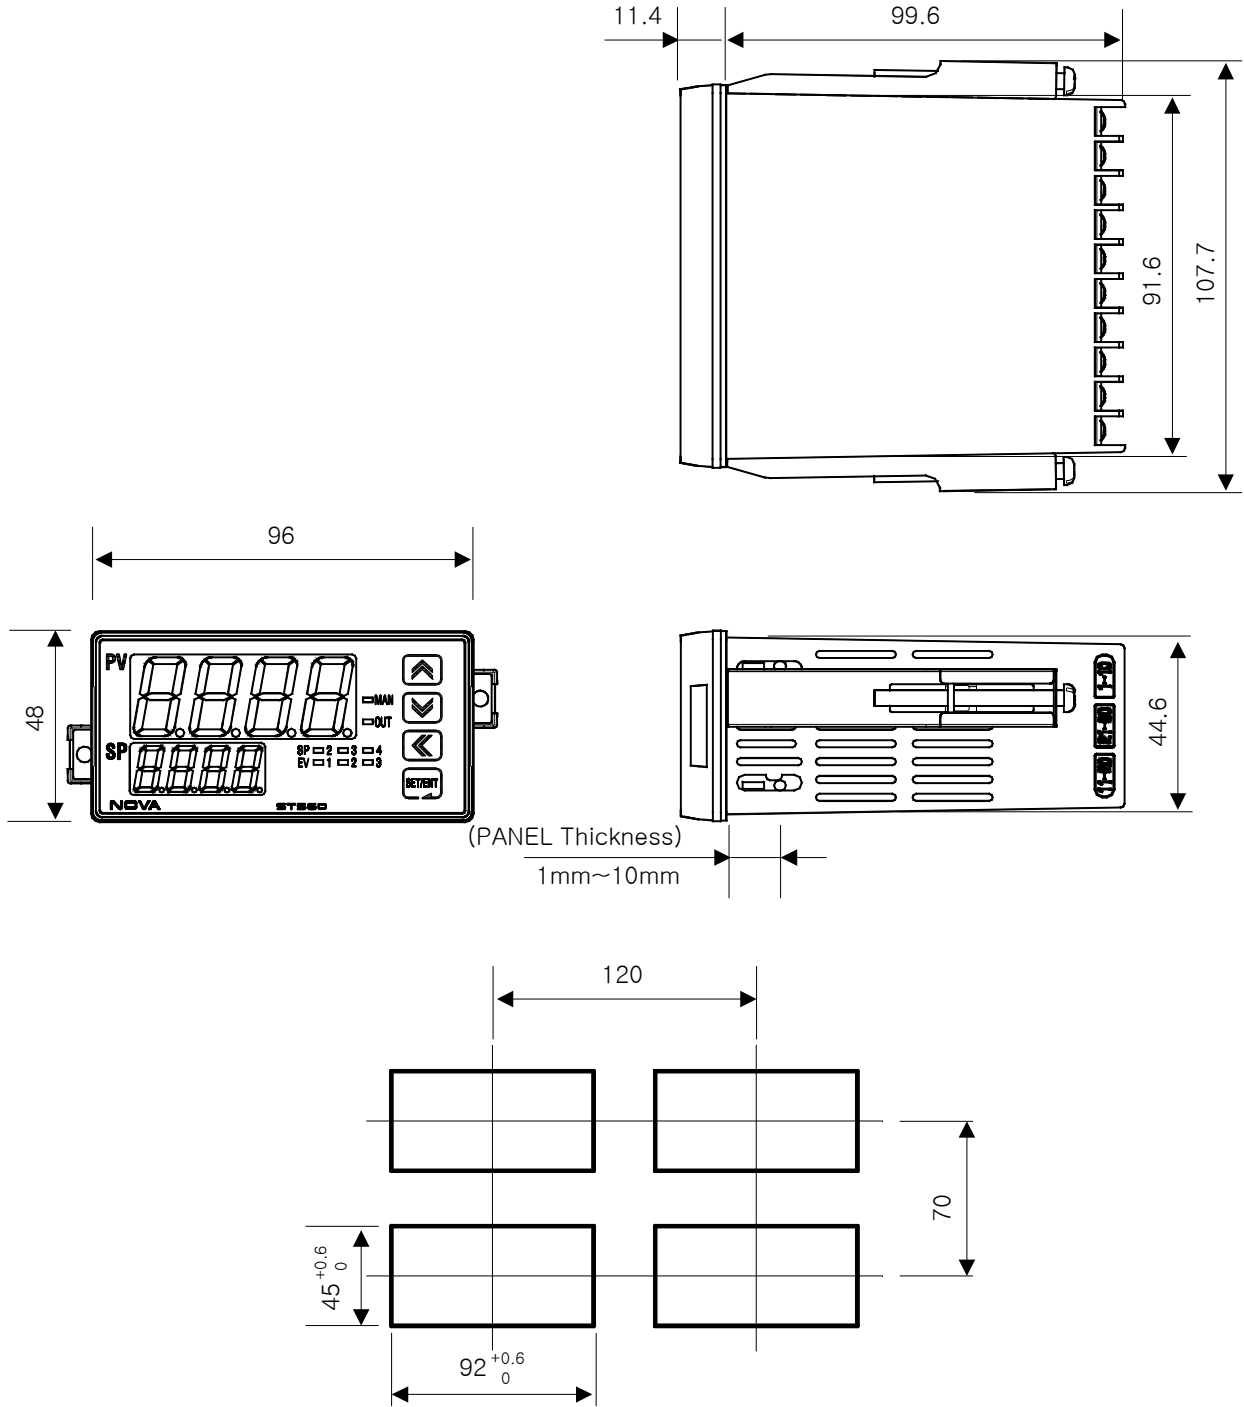

ST540

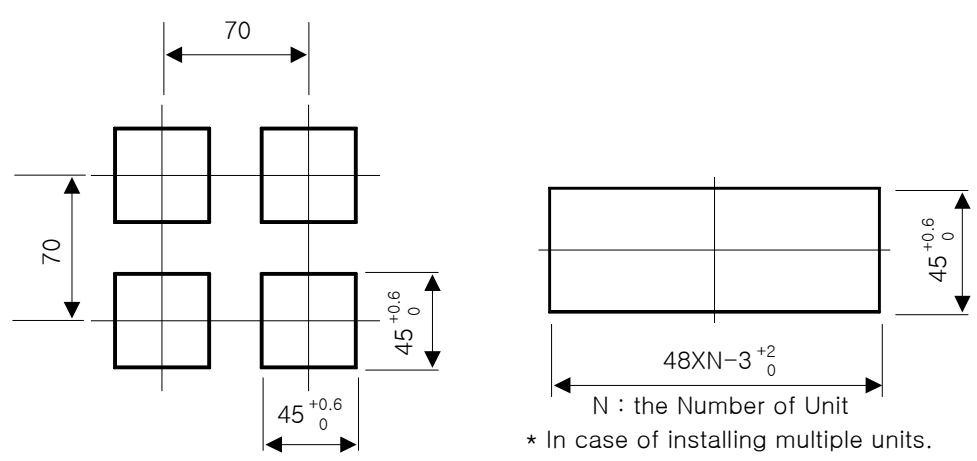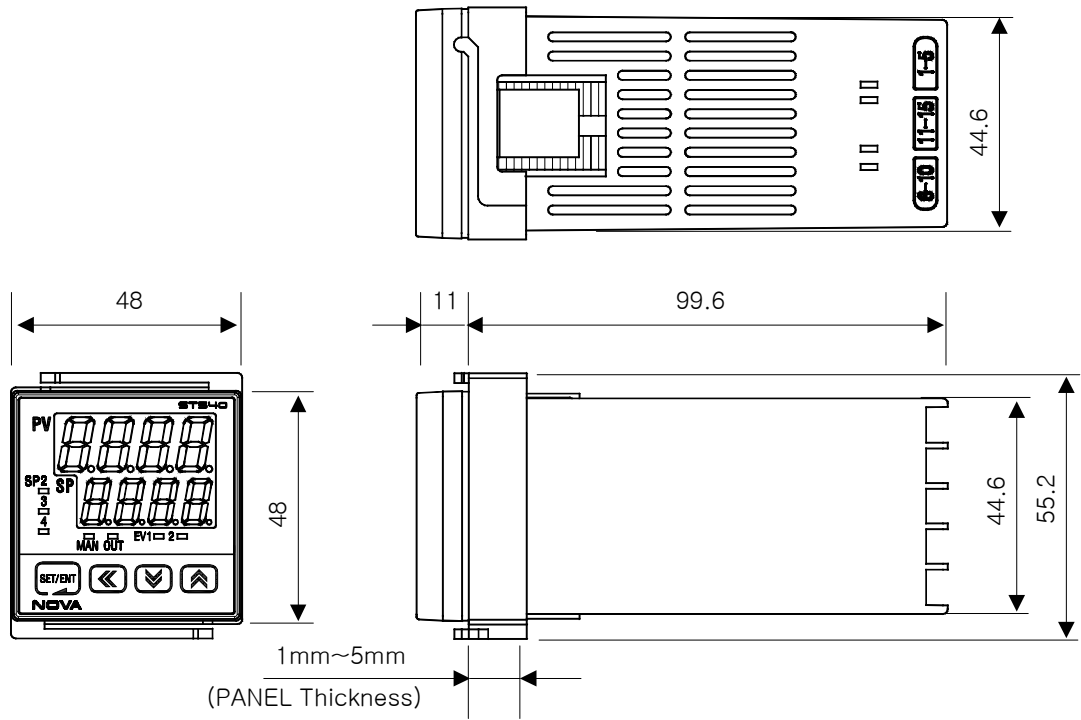

7.2 How to install Mount

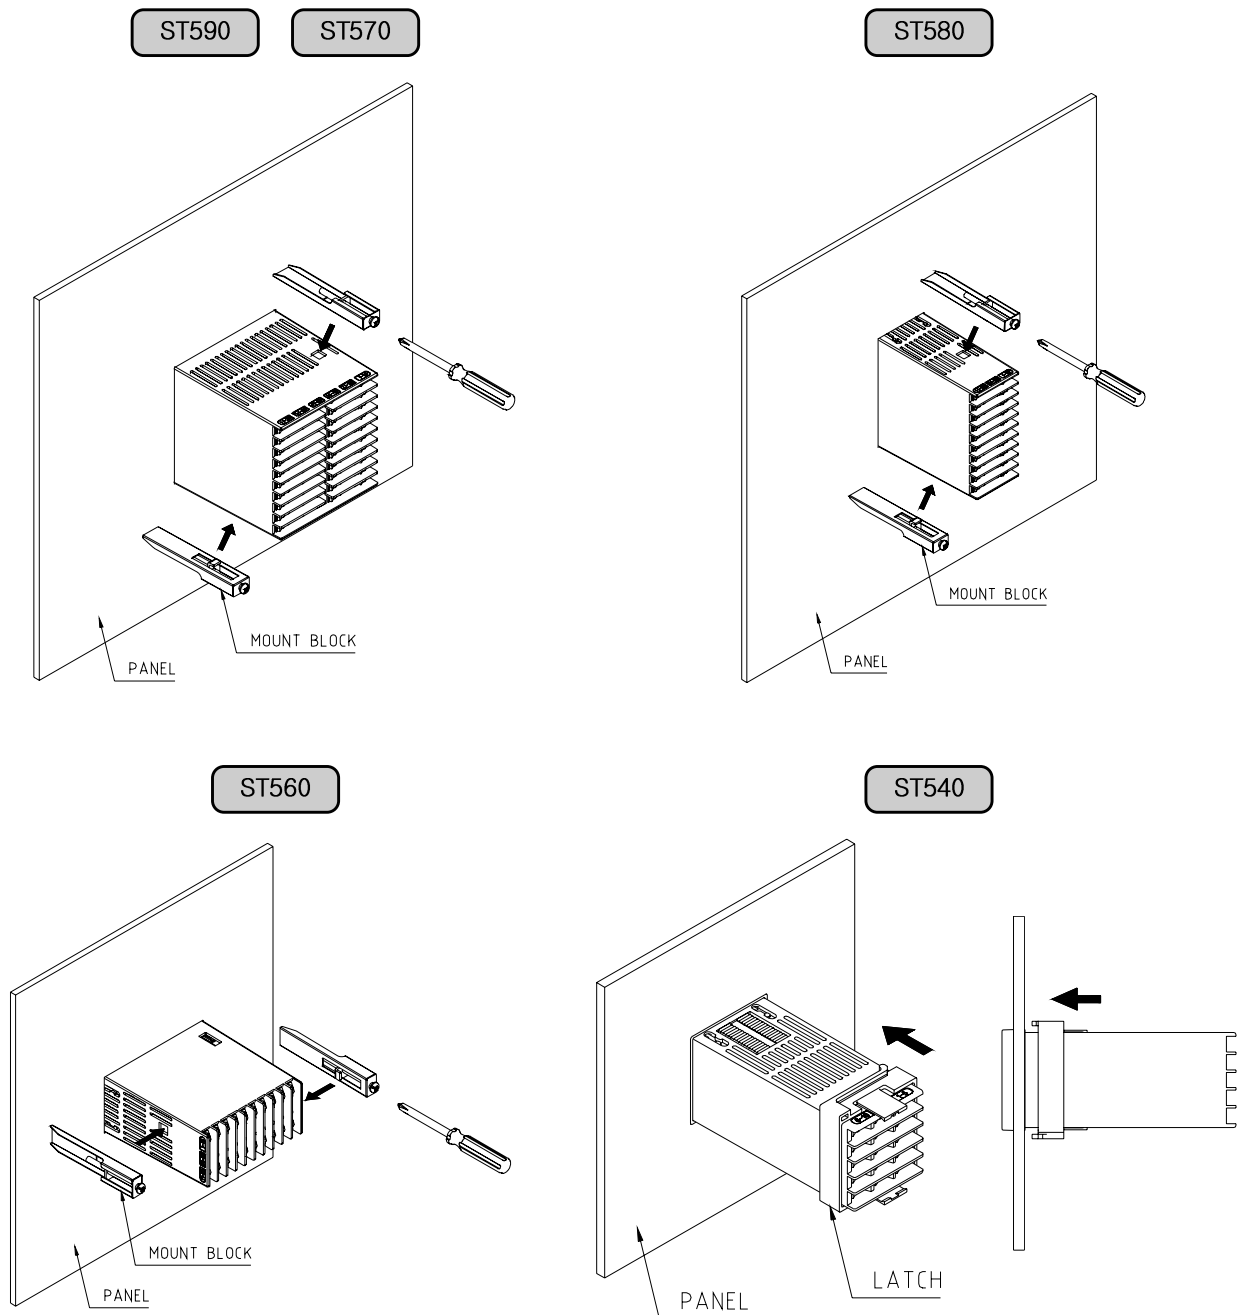

- 1) Cut the mounting panel. (Refer to 7.1 Dimension and Panel Cutout)
- 2) Insert the controller into the panel cutout with the rear terminal board facing ahead.
- 3) Attach the right and left mount and fix it to the panel.(Use driver)




Do not excessively tighten the clamp screws, protecting the controller housing and mount against being damaged.

7.3 Power Cable Specification

Vinyl insulated wire 0.9~2.0mm² (Allowed Rating Voltage 300V max)

7.4 Terminal Specification

Use M3.5 screw-compatible crimp-on terminals with insulating sleeve as shown below.

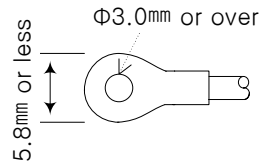

“Use Copper Conductors Only” if the terminal is only for connection to copper wire.



First Turn off the source circuit breaker, check to ensure that the power cable is not conducting electricity using a tester, and then proceed with wiring in the manner.


- Never touch the terminal in the rear panel to prevent electric shock when power is supplied to the controller.
- Be sure to turn off the electric power before wiring.




Bind the wires connected to the controller terminals neatly together in order to prevent electromagnetic wave radiation.

7.5 Terminal Arrangement and External wiring


ST590

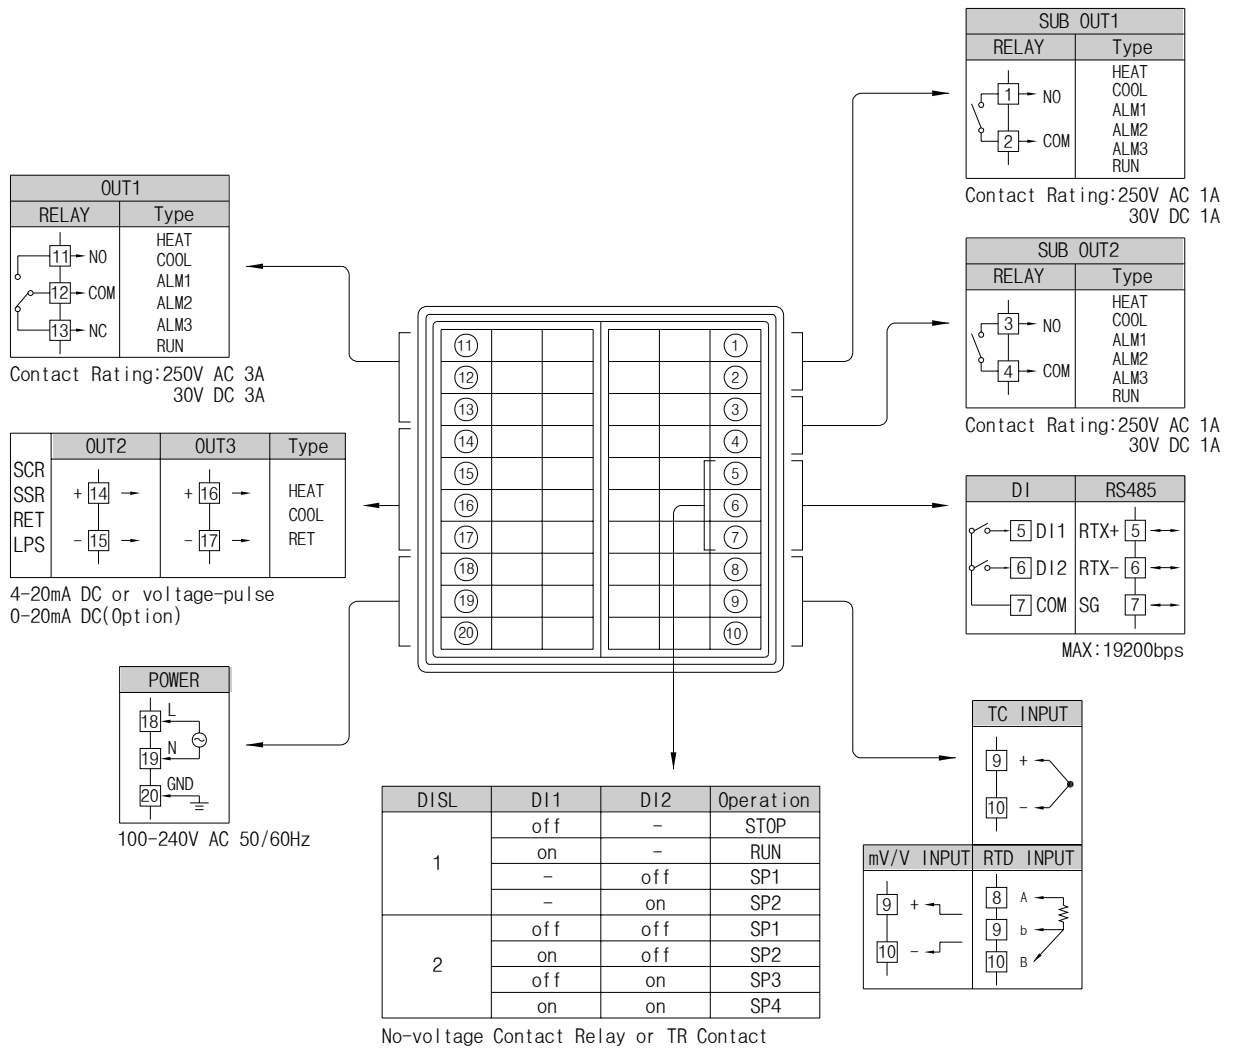


ST580

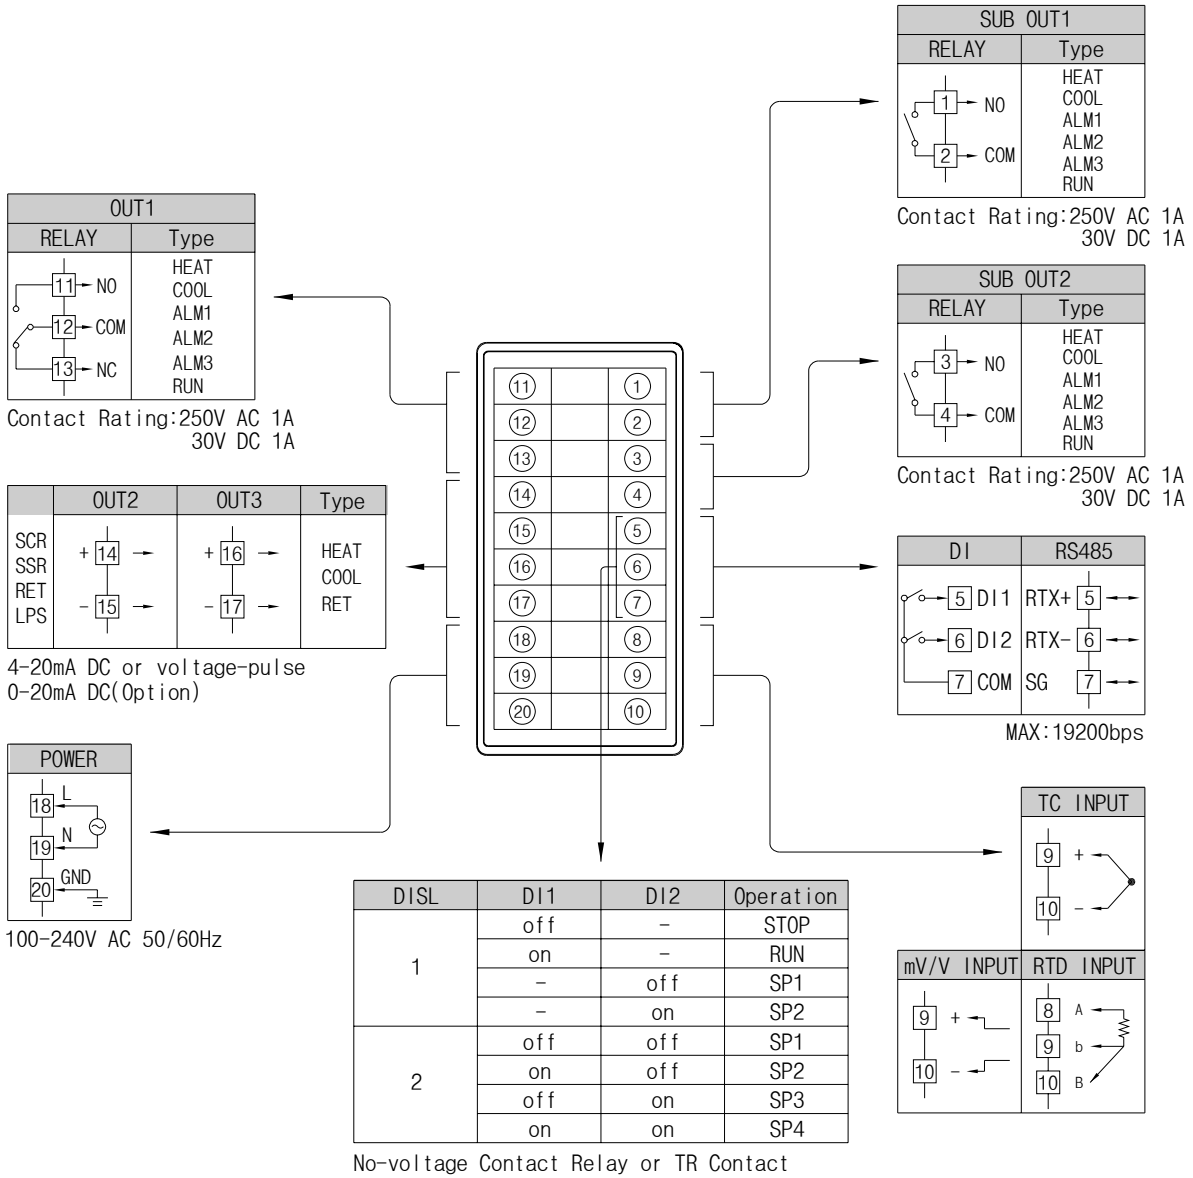

ST570

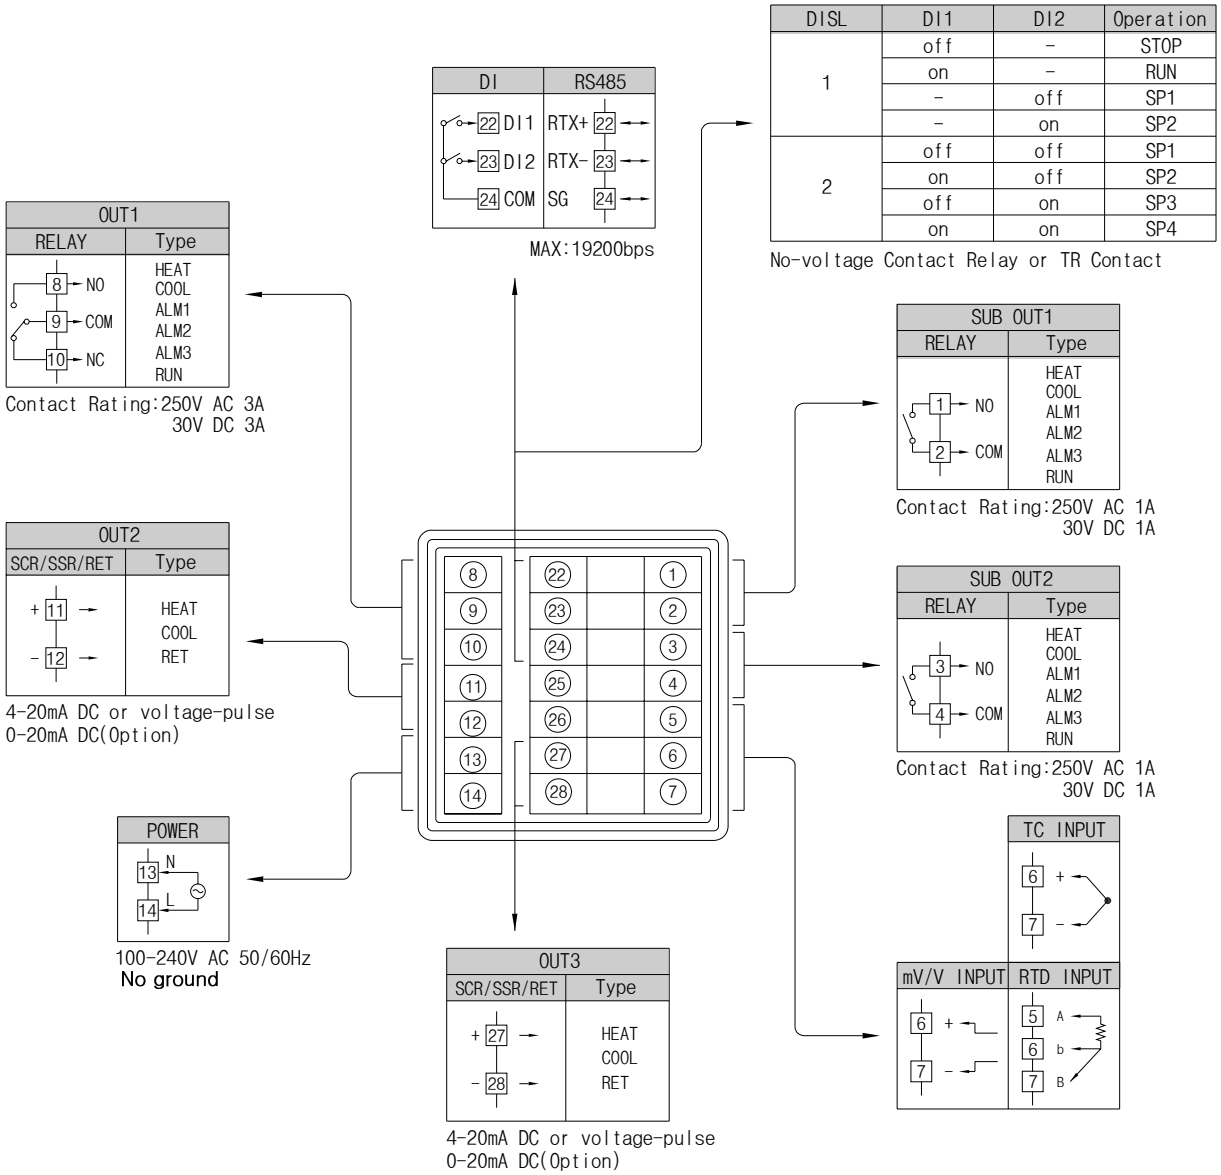


ST560

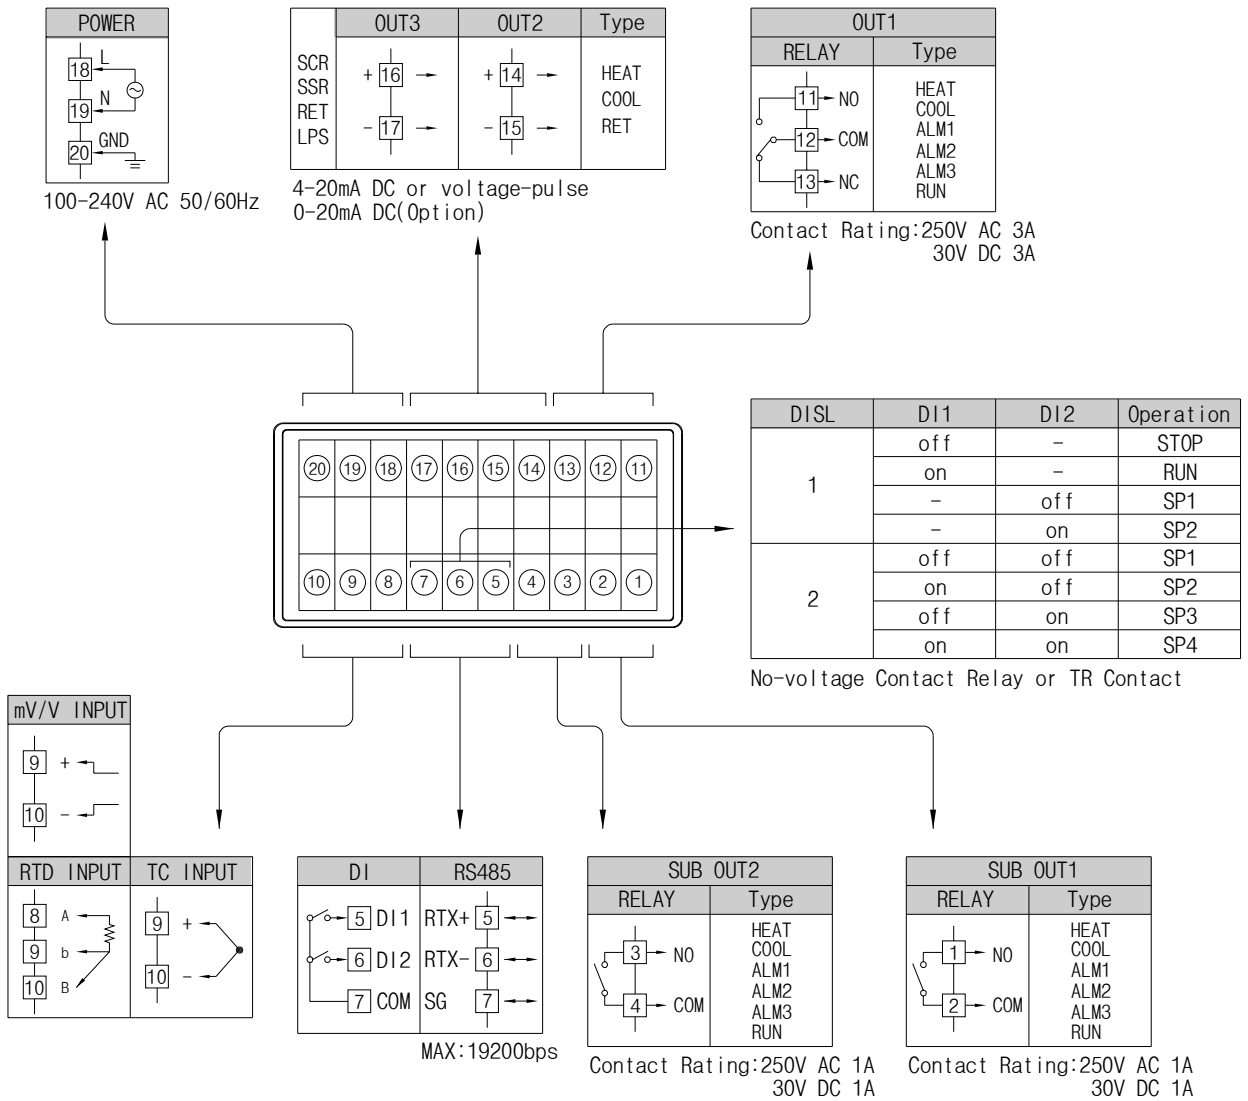


ST540

| DISL | DI1 | DI2 | Operation |
|------|-----|-----|-----------|
| 1 | off | - | STOP |
| | on | - | RUN |
| | - | off | SP1 |
| | - | on | SP2 |
| 2 | off | off | SP1 |
| | on | off | SP2 |
| | off | on | SP3 |
| | on | on | SP4 |

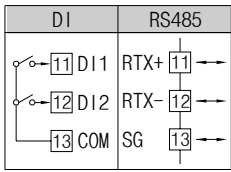


MAX:19200bps


No-voltage Contact Relay or TR Contact

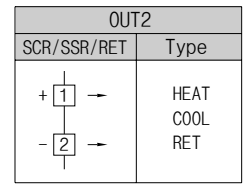





4-20mA DC or voltage-pulse
0-20mA DC (Option)

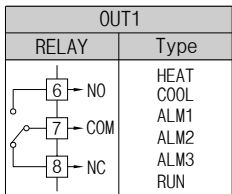

Contact Rating:250V AC 3A
30V DC 3A




100-240V AC 50/60Hz
No ground

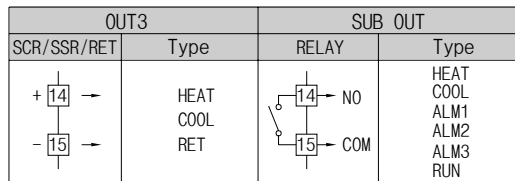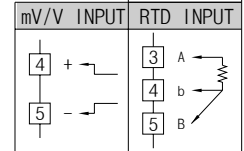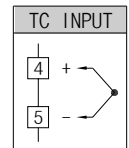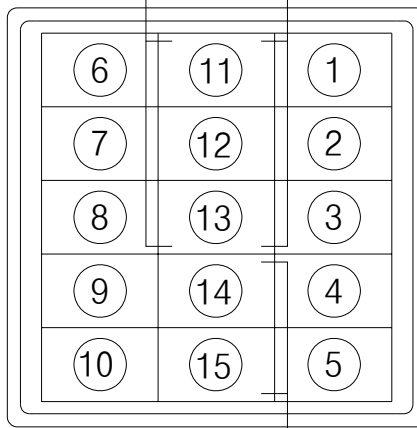

4-20mA DC or voltage-pulse
0-20mA DC (Option) Contact Rating:250V AC 1A
30V DC 1A

7.6 Grounding and Power Cable Connection.

- Use a thick grounding cable (2 mm² or thicker and shorter than 20m) for class-3 grounding or higher (grounding resistance : 100 Ω below)
- Be sure to ground from the grounding terminal to an independent grounding point(1 point grounding)
- Use Vinyl insulation wire 0.9~2.0mm² (Allowed Rating Voltage 300V max) or higher leveled cable for power cable connection.

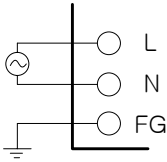

Be sure to ground FRAME GROUND (FG).
 Be sure to keep L(Hot) and N(neutral) status connection.
 Otherwise, it may result for operation default and defect.




To prevent electric shock, be sure to turn off the controller and the source circuit breaker before wiring.




- Be sure to connect to correct polarities, Connecting to a wrong polarity may cause unexpected malfunction.
- Use shielded wires and ground the shielding to an independent grounding point.
- Keep the input circuit wiring as far as possible away from the power and ground circuit.
- Use a wire having a low conductor resistance and no three-wire resistance differential.

7.7 ANALOG INPUT Connection.


(1) RTD Input.

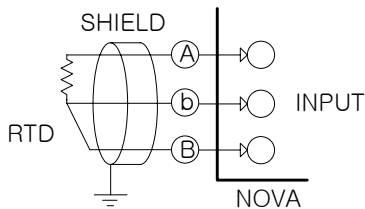

(2) DC VOLTAGE Input.

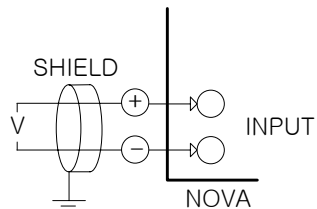

(3) DC CURRENT Input.

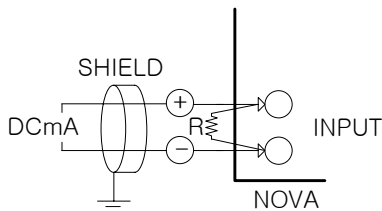

7-8. ANALOG OUTPUT Connection.




To prevent electric shock, be sure to turn off the Nova Controller and the source circuit breaker before wiring.



- Be sure to connect to correct polarities. Connecting to a wrong polarity may cause serious trouble.
- Use shielded wires for the wiring and, Be sure to connect independently(1 point grounding)

(1) Voltage Pulse Output(SSR)/Current Output(SCR)

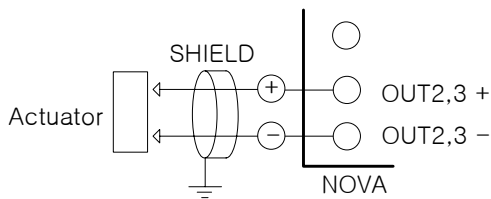


SCR : 4~20mA DC, 600 ohm max
 SSR : 12V DC min, 600 ohm min



To prevent electric shock, be sure to turn off the Nova controller and the source circuit breaker before connection/disconnection of the actuator as well as wiring.

(2) Retransmission Output(RET)

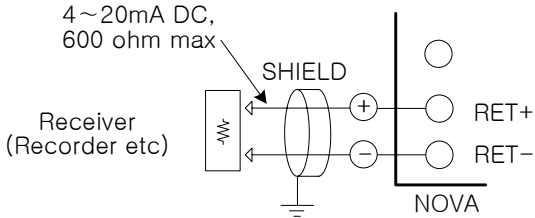


4~20mA DC,
 600 ohm max




To prevent electric shock, be sure to turn off the Nova controller and the source circuit breaker before connection/disconnection of the receiver as well as wiring.

(3) Loop Power Supply(LPS)

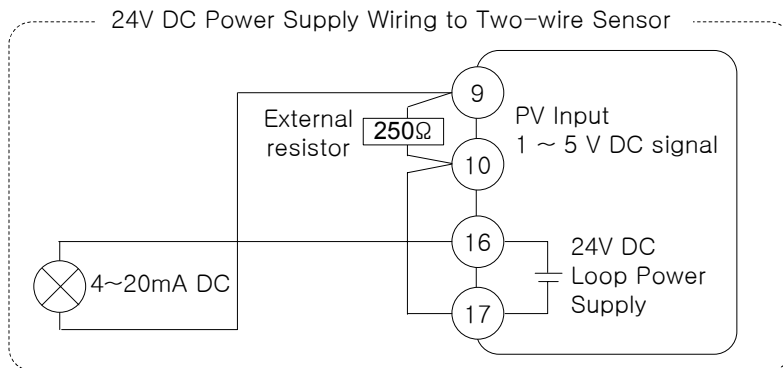

TYP 24±0.5V 30mA
 MAX 22±0.5V 0.85W


7.9 External Contact Output Connection(RELAY)

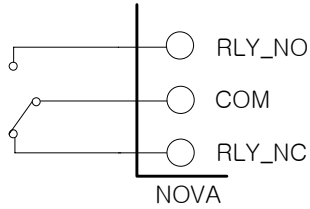


To protect electric shock, be sure to turn off the Nova controller and the source circuit breaker before wiring

7.10 External Contact Input Connection(DI)

- Use a no-voltage contact such as relay contact.
- It has an ample switching capacity for the terminal's OFF voltage (approx. 5V) and On current (approx. 1mA)
- When using Open Collector(TR), use one with 2V or lower voltage when the contact is ON and 100 μ A or less leakage current when it is OFF.

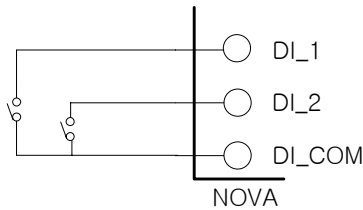

▲ RELAY Contact Connection

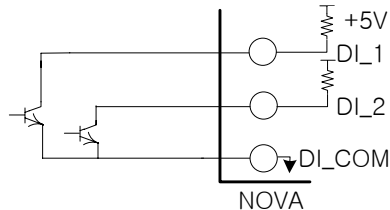

▲ TRANSISTOR Contact Connection



To prevent electric shock, be sure to turn off the Nova controller and the source circuit breaker before wiring

7.11 Use an Auxiliary Relay.

- When using an auxiliary relay or inductance load (L) such as solenoid, be sure to insert a CR filter (for AC) or diode (for DC) in parallel as a surge-suppressor circuit to reject sparks, preventing malfunction or damage.


Recommended CR filters are as follows.

- Recommended CR FILTER
 - ▶ Seong Hoo Electronics : BSE104R120 25V (0.1 μ +120 Ω)
 - ▶ HANA PARTS CO. : HN2EAC
 - ▶ Songmi Eolectic co.,Ltd : CR UNIT 953, 955 etc
 - ▶ Jiwol Electric Co.,Ltd : SKV, SKVB etc
 - ▶ Shinyoug Communications Co.,Ltd : CR-CFS, CR-U etc




If inductance load is over as per the controller specifications, it is needed to set frequent On/Off relay operations.


(1) In case of DC RELAY

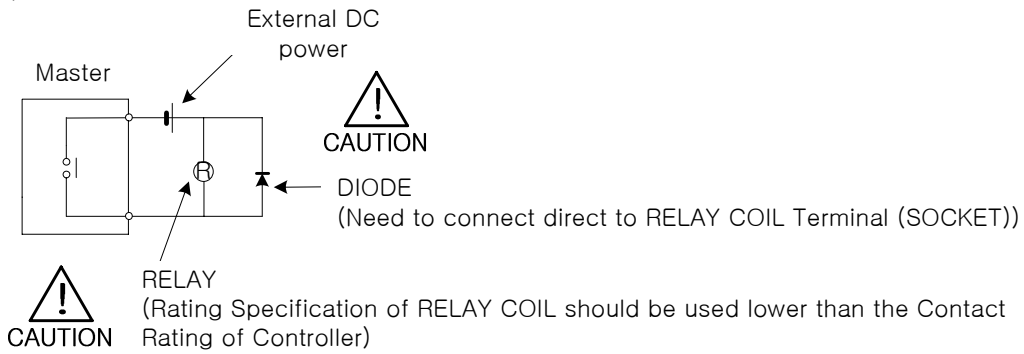

(2) In case of AC RELAY

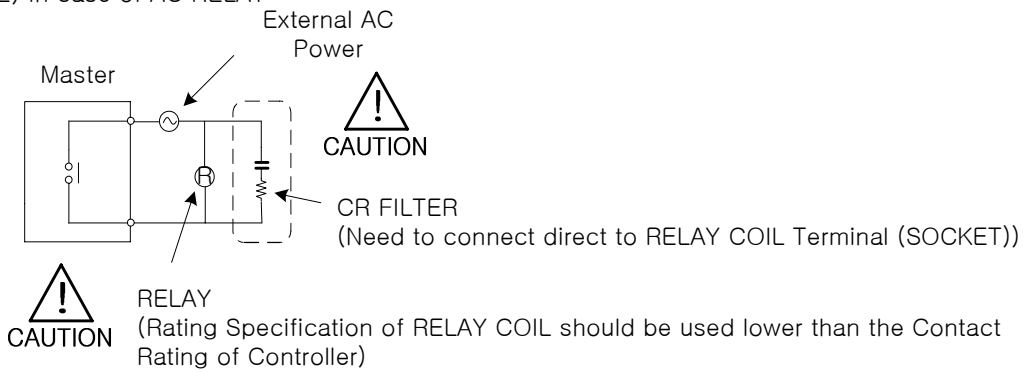

7.12 Communication Wiring (RS485)

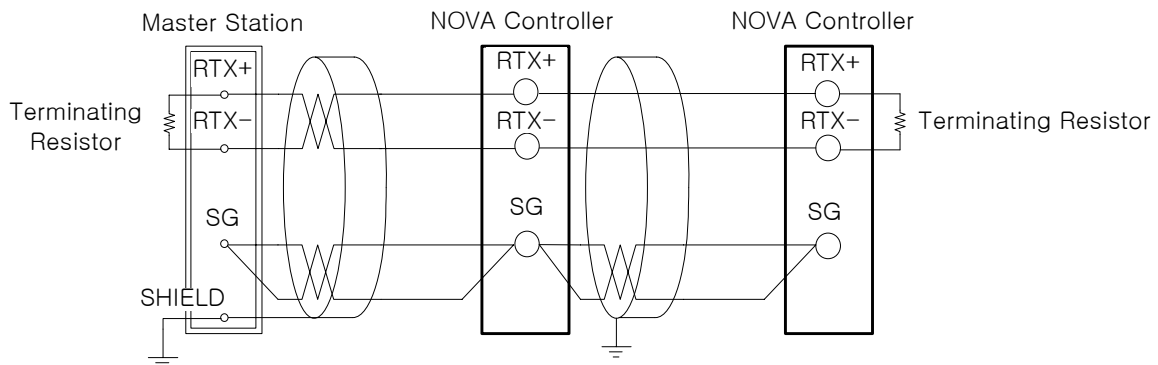

- Up to 31 slave controllers(Nova series instruments equipped with communication option) can be multidrop-connected.
- Be sure to connect terminating resistors(220Ω, 1/4W) to slave and master controllers at communication-channel ends as shown above.



To prevent electric shock, be sure to turn off the NOVA controller and source circuit breaker before wiring.

* D-Register

| NO. | PROCESS | FUNCTION | SET POINT | SIGNAL | ALARM | PID | IN/OUT |
|-----|-----------|---------------|-----------|--------|-------|-------|--------|
| | 0 | 100 | 200 | 300 | 400 | 500 | 600 |
| 0 | | | SPSL | | | | |
| 1 | NPV | R-S,STOP/RUN | SP1 | | ALT1 | ARW | IN-T |
| 2 | NSP | | SP2 | | ALT2 | FUZZY | INT-U |
| 3 | | | SP3 | | ALT3 | C.MOD | IN.RH |
| 4 | | | SP4 | | | | IN.RL |
| 5 | SPSL | A/M | | | | | IN.DP |
| 6 | MVOUT | H.OUT(MVOUT) | | | AL-1 | | IN.SH |
| 7 | HOUT | C.OUT(MVOUTc) | | | AL-2 | | IN.SL |
| 8 | COUT | | | | AL-3 | | IN.FL |
| 9 | PIDNO | | | | | | BSL |
| 10 | NOWSTS | | | | | | RSL |
| 11 | | | SPRH | | A1DB | 1.P | BSP1 |
| 12 | | | SPRL | | A2DB | 1.I | BSP2 |
| 13 | | | | | A3DB | 1.D | BSP3 |
| 14 | ALSTS | | TMU | | | 1.MR | D.FL |
| 15 | | | | | | 1.Pc | BS0 |
| 16 | | | U.SLP | | A1DY | 1.Ic | BS1 |
| 17 | | | D.SLP | | A2DY | 1.Dc | BS2 |
| 18 | | | | | A3DY | 1.DB | BS3 |
| 19 | ERROR | | | | | RP1 | BS4 |
| 20 | PROC_TIME | | | | | | |
| 21 | | AT | | | AL1.H | 2.P | OUT1 |
| 22 | | AT-G | | | AL2.H | 2.I | OUT2 |
| 23 | | | | | AL3.H | 2.D | OUT3 |
| 24 | | | | | | 2.MR | |
| 25 | | | | | | 2.Pc | SUB1 |
| 26 | | | | | AL1.L | 2.Ic | SUB2 |
| 27 | | | | | AL2.L | 2.Dc | |
| 28 | | | | | AL3.L | 2.DB | |
| 29 | | | | | | RP2 | |
| 30 | | | | | | | |
| 31 | | S-TM | | | | 3.P | HEAT2 |
| 32 | | P-TM | | | | 3.I | COOL2 |
| 33 | | | | | | 3.D | HEAT3 |
| 34 | | ONOF | | | | 3.MR | COOL3 |
| 35 | | US1 | | | | 3.Pc | |
| 36 | | US2 | | | | 3.Ic | |
| 37 | | LOCK | | | | 3.Dc | O.ACT |
| 38 | | DI.SL | | | | 3.DB | CT |
| 39 | | DSP.H | | | | RHY | CTc |
| 40 | | DSP.L | | | | | |
| 41 | | | | | | 4.P | OH |
| 42 | | | | | | 4.I | OL |
| 43 | | | | | | 4.D | |

| NO. | PROCESS | FUNCTION | SET POINT | SIGNAL | ALARM | PID | IN/OUT |
|-----|---------|----------|-----------|--------|-------|------|--------|
| | 0 | 100 | 200 | 300 | 400 | 500 | 600 |
| 44 | | | | | | 4.MR | HYS |
| 45 | | | | | | 4.Pc | |
| 46 | | | | | | 4.Ic | PO |
| 47 | | | | | | 4.Dc | POc |
| 48 | | | | | | 4.DB | HYS.H |
| 49 | | | | | | RDV | HYS.L |
| 50 | | | | | | | |
| 51 | | | | | | | RET |
| 52 | | | | | | | RETH |
| 53 | U | | | | | | RETL |
| 54 | s | | | | | | |
| 55 | e | | | | | | |
| 56 | r | | | | | | |
| 57 | | | | | | | |
| 58 | A | | | | | | |
| 59 | r | | | | | | |
| 60 | e | | | | | | |
| 61 | a | | | | | | COM.P |
| 62 | | | | | | | BAUD |
| 63 | | | | | | | PRTY |
| 64 | | | | | | | SBIT |
| 65 | | | | | | | DLEN |
| 66 | | | | | | | ADDR |
| 67 | | | | | | | RP.TM |
| 68 | | | | | | | |
| 69 | | | | | | | |
| 70 | | | | | | | |
| 71 | | | | | | | |
| 72 | | | | | | | |
| 73 | | | | | | | |
| 74 | | | | | | | |
| 75 | | | | | | | |
| 76 | | | | | | | |
| 77 | | | | | | | |
| 78 | | | | | | | |
| 79 | | | | | | | |
| 80 | | | | | | | |
| 81 | | | | | | | |
| 82 | | | | | | | |
| 83 | | | | | | | |
| 84 | | | | | | | |
| 85 | | | | | | | |
| 86 | | | | | | | |
| 87 | | | | | | | |

| NO. | PROCESS | FUNCTION | SET POINT | SIGNAL | ALARM | PID | IN/OUT |
|-----|---------|----------|-----------|--------|-------|-----|--------|
| | 0 | 100 | 200 | 300 | 400 | 500 | 600 |
| 88 | | | | | | | |
| 89 | | | | | | | |
| 90 | | | | | | | |
| 91 | | | | | | | |
| 92 | | | | | | | |
| 93 | | | | | | | |
| 94 | | | | | | | |
| 95 | | | | | | | |
| 96 | | | | | | | |
| 97 | | | | | | | |
| 98 | | | | | | | |
| 99 | | | | | | | |

(※ Thick line : Read Only)



SAMWONTECH CO., LTD.

202-703, Buchon Techno-park,
Yakdae-dong, Wonmi-gu, Buchon,
Gyeonggi-do, Korea 420-733
TEL: +82-32-326-9120, 9121
FAX: +82-32-326-9119
[http:// www.samwontech.com](http://www.samwontech.com)
E-mail: webmaster@samwontech.com

Further information contact Samwontech